

Earthmate® **PN-40**

User Manual

Updated for 2.5 Firmware Release



Earthmate® PN-40 Accessories

We offer a variety of products designed to carry, securely mount, and power your Earthmate PN-40. You can also inexpensively subscribe for a year's worth of supplemental data downloads, including color aerial imagery, USGS 7.5-min. topographic quads, and NOAA nautical charts.

Also Available from DeLorme

DeLorme is a leading provider of mapping software for both consumer and professional markets. Our Street Atlas USA® software titles deliver intelligent mapping, routing, and GPS navigation solutions for laptop PCs and PDAs. XMap® is a three-tiered GIS software suite that integrates advanced geospatial data management into DeLorme's core GPS mapping framework.

We also publish the Atlas & Gazetteer™ series of topographic map books for individual states.

Table of Contents

Getting Started.....	2
Basic Functions.....	10
The Satellites Page.....	12
The Map Page.....	16
The Compass Page.....	31
The Trip Info Page.....	34
The Find Page.....	37
The Waypoints Page.....	45
The Geocaches Page.....	50
The Routes Page.....	56
The Tracks Page.....	62
The Sun/Moon Page.....	66
The Tide Page.....	68
The Hunt/Fish Page.....	69
The Device Setup Page.....	70
Appendix A: Page Function Table.....	77
Appendix B: Specifications.....	82
Appendix C: Waypoint/Geocache Symbols.....	87
Glossary.....	91
Index.....	94

Getting Started

Tips:

- Setting the correct battery type optimizes the battery's performance. For more information on selecting battery type, see **To Modify the System Settings** on page 70.
- If the Earthmate PN-40 does not turn on, ensure that the batteries are properly inserted into the device and that they are mostly or fully charged.

Note: If the Earthmate PN-40 is connected to your computer, the first page you see is the Connect to Computer page. For more information, see **Connecting to Your Computer** on page 6.

Thank you for purchasing the DeLorme Earthmate PN-40. This versatile and compact GPS receiver lets you create tracks of your travels, create routes so you never get lost, find points of interest, go geocaching, and more!

This manual provides instructions for using the Earthmate PN-40. Most of the chapters are based on pages, which are the main pages on the Earthmate PN-40. Each chapter describes the features of that particular page and the menu options that are available from that page. In addition, this manual discusses basic functions (such as map panning, battery information, map data information, and more), as well as frequently asked questions, warranty information, and so on.

Installing the Batteries

The Earthmate PN-40 is a battery-powered device. It can be powered by one rechargeable Lithium-ion (Li-ion) battery or two AA batteries (NiMH, alkaline, or lithium).

To install the batteries, unscrew the D-rings on the back of the Earthmate PN-40 until you can remove the battery cover. Then, insert the batteries according to the polarity symbols found inside the battery compartment. Position the battery cover on the Earthmate PN-40 and screw the D-rings into the Earthmate PN-40.

Because the Earthmate PN-40 has a real-time clock that requires power even when the device is powered off, your batteries are constantly in use. If you use your Earthmate PN-40 sporadically (for example, more than a month between uses), remove the batteries for long-term storage and then reinsert them when you want to use the device.

Turning On the Earthmate PN-40

The Power button is located at the bottom right corner of the button area. To turn on the Earthmate PN-40, press and hold the **Power** button until you see the Welcome screen. When you first turn on the Earthmate PN-40, it opens in Demo Mode. Follow the instructions on the screen to view demo slides. To prevent Demo Mode from showing when you start the device, press ENTER to clear the **Show at Startup** check box. You can restore Demo Mode with the MENU>Device Setup>System>GPS Settings.

The first page that appears after you exit Demo Mode is the Satellites Page. Your GPS status displays in the top left corner of the Satellites Page. Press the PAGE button to display the Map Page

on the screen. The map centers on your current location when the device gets a 2-D or 3-D fix. The default view when a GPS fix cannot be obtained is your last GPS position.

If it takes a long time for the device to obtain a 2-D or 3-D fix, verify it has a clear view of the sky. Be sure that trees, buildings, and other obstacles are not blocking the Earthmate PN-40. If the device still cannot obtain a 2-D or 3-D fix, press the QUIT button to return to the Satellites Page, press the MENU button, highlight the **Set Current Location** option, and then press ENTER. The Map Page automatically displays. Pan the map to your current location and press ENTER.

To turn off the Earthmate PN-40, press the **Power** button and then press the ENTER button to confirm you want to turn off the Earthmate PN-40.

Using the Buttons on the Earthmate PN-40

The buttons on the Earthmate PN-40 give you access to all of the functions on the device.

In/Out

Use the IN and OUT button to zoom the map in or out or scroll through a list.

- Press the IN (left) side of the button once to zoom the map in one level and show more detail.
- Press and hold the IN side of the button to zoom the map in to its maximum level.
- Press the OUT (right) side of the button once to zoom the map out one level and show less detail.
- Press and hold the OUT side of the button to zoom the map out to its maximum level.
- Press IN or OUT to scroll backward or forward through a list.

Page

Use the PAGE button to scroll through the enabled pages on the Earthmate PN-40. The default sequence is:

- Satellites
- Map
- Compass
- Trip Info
- Route Directions (available when navigating)

For an overview of what you can view and do on each page and each page's menu functions, see *Appendix A* on page 77.

Tip: Use the Device Setup>Page Order settings to add, remove, or reorder the pages that display when you press the PAGE button. For more information, see the **To Modify the Page Order Settings** section on page 75.

Menu

The MENU button gives you access to many functions. Some menus are divided into top and bottom sections that are separated by a line. The items in the top section are specific to the active page. The items in the bottom section are standard menu options that are available from any page.

Find

The Find button is labeled with a magnifying glass. Use it to search for a point of interest, waypoint, geocache, address, coordinate, and more. You can search for a location based on its name or its proximity to the current map center.

Mark Waypoint

The Mark button is labeled with a push pin. Use it to mark a waypoint at your current GPS location or, when panning, at the cursor location. Once you mark a location, you can edit the waypoint name, coordinates, and elevation; provide comments about the waypoint; view the waypoint on the map; navigate to the waypoint; average the waypoint for greater accuracy; save the waypoint; or delete the waypoint.

Arrow Keypad

Use the arrow keypad to:

- Move the map cursor left, right, up, or down.
- Pan the map by moving the cursor to the edge of the map.
- Highlight options in menus or lists. Press down to move to the next entry, press up from the first entry to go to the last entry, or down from the last entry to go to the first entry. Press and hold to quickly scroll through a menu or list.
- Highlight characters on the keyboard screen.
- Highlight fields.
- Press any arrow once to turn on the backlight.

Enter

Use the ENTER button to:

- Select a menu entry or on-screen button/field.
- Get information about a point on the map. Press the ENTER button at any time when viewing

Note: To ensure your waypoint displays on the Waypoints Page, make sure you select a waypoint symbol. If you use a geocache symbol, the waypoint will be saved in the Geocaches Page. For a list of symbols, see **Appendix C** on page 87.

the Map Page to see detailed information, if available.

Quit

The function of the QUIT button varies depending on the current status of the Earthmate PN-40. You can use the QUIT button to cancel actions (for example, panning), for keyboard entry, to delete individual points when measuring distance, and so on. If you are performing steps in a procedure, pressing the QUIT button moves you backward through the page sequence.

Power

Use the Power button to turn the Earthmate PN-40 on and off, to change the backlight settings, or to reset it:

- To turn the Earthmate PN-40 on, press and hold the **Power** button until the Welcome screen displays.
- To turn the Earthmate PN-40 off, press the **Power** button. When you see the “Press ENTER to power down.” message, press the ENTER button to confirm that you want to turn off the Earthmate PN-40. If you do not want to turn the Earthmate PN-40 off, wait five seconds or press the QUIT button.
- To change the backlight intensity percentage, press and hold the **Power** button for approximately two seconds until you see the backlight indicator. Press the arrow keypad to the left to move the slider and decrease the backlight intensity. Press the arrow keypad to the right to move the slider and increase the backlight intensity. Each level of intensity represents a 10% interval (100% is the maximum backlight intensity, 10% is the minimum backlight intensity).
- To turn the backlight off when the backlight timer is set to Always On, press and hold the **Power** button for three seconds until the backlight shuts off.

Note: The backlight turns on any time you press a button unless you turned it off using the Device Setup menu. For more information, see the *To Modify the Display Settings* section on page 71.

- When you charge the Earthmate PN-40, the backlight intensity setting is set to a default charging intensity.
- To reset the Earthmate PN-40 when it is on, press and hold the **Power** button for seven seconds.



Press ENTER to confirm that you want to turn the device off

Tip: Decrease the backlight timer to help conserve battery life.



Note: Large maps may take longer to transfer to the device.

Note: To activate your Earthmate PN-40 for exchanging maps and data with your DeLorme desktop software, connect the device to your computer and select the **Data Exchange** option. Then, in your mapping software, click the **Exchange** button on the toolbar. This enables the full capabilities that are available for exchanging maps and data.

Transferring Map Data to the Earthmate PN-40

Your Earthmate PN-40 comes equipped with a base map showing overview-level world coverage, as well as U.S. interstates and routes, state routes, and major roads. While this provides a great view of a large area, chances are that you will want a detailed view of a smaller area for hiking, geocaching, and other activities. You can transfer more detailed maps to the Earthmate PN-40 using:

- **PN-40 Detailed Map DVDs**—Included with your Earthmate PN-40 are three DVDs of detailed pre-cut Topo USA® data of the entire U.S. Install the maps you need on your SD/SDHC card to easily and quickly get them on your device. When you use the pre-cut maps, you do not have to include the topographic data from your mapping software when you create a map package—which means smaller file size and faster transfer to the Earthmate PN-40.
- **Compatible DeLorme Mapping Software**—Instructions for sending maps to your Earthmate PN-40 vary by application. For more information, see the mapping application's Help for instructions on sending maps to your Earthmate PN-40.

You can also use the NetLink tab in your DeLorme mapping software or the DeLorme Earthmate Online Map Center (<http://data.delorme.com>) to download many types of data, such as satellite imagery, aerial imagery, USGS Topo Quad maps, NOAA nautical charts, and more. With an annual Map Library subscription, you can download unlimited data. See www.delorme.com for details.

Connecting to Your Computer

When you connect your Earthmate PN-40 to your computer, the Connect to Computer page displays. This allows you to select the correct option for transferring information between your mapping application and your device. If you do not want to see this page when you connect your Earthmate PN-40 to your computer, you can hide it using the Device Setup>Connect to Computer menu. For more information, see *To Modify the Computer Connection Settings* on page 71.

To Connect to Your Computer

To connect your Earthmate PN-40 to your computer, attach the USB cable to the device and then plug it into the computer.

Data Exchange

Use this option for GPS use and to transfer waypoints, tracks, and routes to or from the device. This is the default transfer method. You can transfer map packages, but transfer will be slower than the

map transfer method. Highlight **Data Exchange** and press ENTER.

Map Transfer

Use this option to quickly transfer map packages. Highlight **Map Transfer** and press ENTER. On the Choose Transfer Method page, highlight one of the following options and press ENTER:

- **Transfer to SD Card**-Use this option to transfer map packages to an SD card in the device. Map packages are transferred to the “maps” folder on the SD card. You can also use this method to transfer a map from the Earthmate PN-40 to your DeLorme mapping software. You cannot use this method to transfer waypoints, tracks, and routes.
- **Transfer to Internal**-Select this option to transfer map packages to the device’s internal memory. The device is used as a USB hard drive. You cannot use this method to transfer waypoints, tracks, or routes.

Once you select an option, the Transfer Maps page displays. Use your mapping software to transfer your maps, and then press ENTER on the device to return to Data Exchange mode.

Firmware Transfer

Transfer firmware updates to an SD card in your Earthmate PN-40 to update your device. Updates are available through the NetLink tab and the Technical Support section of the DeLorme website. Follow the firmware update installation instructions and download the update to your computer. Connect your device to your computer, and, on the device, select the **Data Exchange** option. Then, press MENU, go to Device Setup>Connect to Computer>USB Settings, select the **Firmware Transfer** option, and follow the update instructions.

About GPS

What is GPS?

The Global Positioning System (GPS) applies modern technology to the ancient art of navigation. The U.S. Department of Defense has developed and launched a series of positioning satellites in an orbiting “constellation.” These satellites are used as reference points in much the same way stars have been used in conventional navigation.

Using these satellites, a GPS receiver can determine your position anywhere on the globe. GPS provides accurate information about coordinate position, elevation, speed, and direction of travel. Many people have discovered the benefits of GPS for recording tracks and much more.

Note: Mac and Linux users should always select Map Transfer SD Card or Map Transfer Internal.



Connect to Computer page

How Does GPS Work?

The GPS constellation consists of at least 24 satellites, each carrying several atomic clocks to ensure the most accurate time possible. The satellites broadcast low-power radio waves containing the satellite's identity code and the exact time (to the nanosecond) that the message was sent.

When a GPS receiver picks up a satellite signal, it identifies the satellite and compares the signal time with its own clock. The time difference represents the time it has taken for that radio wave to travel from the satellite to the receiver. Since radio waves travel at the speed of light, the time difference can be used to calculate the distance from the satellite to the GPS receiver.

The satellite's identity code provides the location of the satellite, and the distance to the receiver creates a sphere of possible locations for the GPS receiver. Without more information, the receiver knows only that it is located somewhere on that sphere.

Two additional satellites are necessary to narrow down the receiver's position. Each of these satellites sends a similar radio message containing time and identity information. The GPS receiver checks the orbital location of each satellite and uses the elapsed time to create two additional spheres of possible locations. These three spheres intersect at two points; however, one of these points is eliminated because it is far away from the Earth's surface. Therefore, the second point is assumed to be correct. The data from these three satellites provides the receiver with a two-dimensional location.

Data acquired from a fourth satellite pinpoints the receiver's exact location. This additional positioning information allows the GPS receiver to calculate its elevation, which is particularly important for GPS users in mountainous locations.

Note: *Placing the Earthmate PN-40 in a jacket or backpack pocket should not affect GPS position accuracy.*

GPS Position Accuracy

Any buildings, natural structures, or heavy foliage that obstruct the GPS antenna's view of the sky prevent satellite signals from reaching the receiver and decrease the accuracy of your position.

Frequently Asked Questions

Can I install non-DeLorme maps on the Earthmate PN-40?

DeLorme's professional GIS software, XMap[®], allows you to register non-DeLorme maps and transfer them to the Earthmate PN-40.

How can I improve the life of my batteries?

When the backlight is on, it consumes a large part of the battery. Changing the backlight timer to turn off after 15 seconds will greatly improve the life of your batteries. For information on changing the backlight timer, see *To Modify the Backlight Timer* on page 69.

Other ways to increase the life of the batteries include:

- Setting the GPS Settings to Power Saving mode
- Disabling GPS while indoors
- Using batteries with higher milliamp ratings (such as Duracell Ultras, Energizer E2s, etc.)

Why does it take so long to find satellites?

Acquiring satellite data takes longer if the batteries are low or if the Earthmate PN-40 does not have a clear view of the sky. Be sure that trees, buildings, and other obstacles are not blocking the Earthmate PN-40 when you begin tracking.

Other factors, such as if you haven't used the device for a long time or if you've moved the device a great distance from its last location, can affect the amount of time it takes to find satellites.

How do I reset the Earthmate PN-40 when it will not turn off?

To reset the Earthmate PN-40, hold the Power button for seven seconds. If that does not work, remove and replace the batteries to reset the Earthmate PN-40.

Why won't my Lithium-ion battery hold a charge?

The Li-ion battery is designed to last for 300-500 charges, depending on environmental conditions.

Where can I find more information about using my Earthmate PN-40?

You can find more information about using the Earthmate PN-40 on our website:

- **DeLorme Forum**—<http://forum.delorme.com/>
- **Blog**—<http://blog.delorme.com/>
- **Scenarios and Tutorials**—<http://www.delorme.com/support>. Type "pn" in the **Search by Keyword** box.
- **Send to GPS Plugin for Geocaching**—<http://www.delorme.com/geocaching/plugin/>

Note: The charging circuit in the Earthmate PN-40 was designed for optimum operation with the RCR-V3 Li-Ion battery sold through DeLorme. Other RCR-V3 Li-Ion batteries may work and charge in the device, but DeLorme can make no guarantees of compatible operation.

Basic Functions

Panning the Map

There are two ways to pan the map:

- Manually pan the map by placing the cursor along the map edge and holding the arrow keypad in the direction that you want to view the map. Press QUIT to center the map on your current location.
- Automatically pan the map when GPS tracking/navigating. The map automatically pans in the direction of travel when the GPS cursor travels outside of the map area.

Getting Information About a Map Object

There are two ways to get information about a map object.

- Press the arrow keypad to position your cursor over the map objects you want to learn more about. The status bar at the bottom of the Map Page provides name information for the object. Press ENTER to display the Info Page.
- Press ENTER at any time to get information about objects that are at your current GPS location.
Note: If multiple objects are found at the cursor location, the Multiple Objects screen displays a list of the available objects at that location; objects you have created appear at the top of the list. Use the arrow keypad to select an object and then press ENTER to view the Info Page for that object. To save a map object as a waypoint, select it, highlight it, and press **Mark**.

Navigating vs. Tracking


What is the difference between navigating and tracking with the Earthmate PN-40?

- You are *navigating* with the Earthmate PN-40 when you use it to follow a route.
- You are *tracking* with the Earthmate PN-40 when the GPS is on, but you are not following a route.

Using the Keyboard

The keyboard is accessible when you need to enter text, such as when editing a waypoint label.



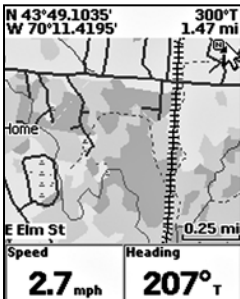





Once the keyboard appears, use the arrow keypad to highlight the letter (A–Z), number (0–9), symbol (+, -, /, &), or punctuation (period, comma, apostrophe, exclamation point) you want to use. In addition, the following special functions are provided:



Move your cursor to the edge of the screen to pan the map in that direction

Note: Manually panning the map changes the focus of the map from your GPS location to the manually panned location.

Note: Once you have marked a map object as a waypoint, you can edit the waypoint details (by highlighting the waypoint information, pressing ENTER and then modifying the information), view it by highlighting **View** and pressing ENTER, or create a route by highlighting **Route** and pressing ENTER.

-  Moves the cursor one space to the left without deleting characters.
-  Moves the cursor one space to the right without deleting characters.
-  Changes the letters from lowercase to uppercase letters (the active case is shown in the keyboard). This function toggles to all caps mode by pressing ENTER twice.
-  Moves the cursor one space to the left, deleting the character that was there.
-  Clears the content of the text field being edited.
-  Accepts the changes made to the text field and closes the keyboard.
-  Moves the cursor one space to the right, leaving a blank space.
-  Moves the cursor to the next line. This option can be used to type more than one line in a comment field.

Charging the Earthmate PN-40

If you are using a DeLorme-supplied RCR-V3 Li-Ion battery, you can charge the Earthmate PN-40 battery by connecting the USB end of the cable to your computer and the other end of the cable to the Earthmate PN-40. To charge the device with the USB cable, the device must be powered on while connected. You cannot use the Earthmate PN-40 to charge rechargeable AA batteries.

 
 
Storing Data on the Earthmate PN-40

The Earthmate PN-40 stores waypoints, geocaches, tracks, routes, and the base map data in its internal memory. You can save maps that are transferred to the Earthmate PN-40 in internal memory or on a removable memory (SD/SDHC) card located under the battery compartment. Use multiple cards to create a map library of the areas you travel to.




Keyboard screen

Tips:

- Press *OUT* to quickly highlight the OK button.
- Press *IN* to delete one character at a time.
- Press *QUIT* to cancel your keyboard entries.
- For existing text, enter a letter to replace the highlighted content. To keep the existing text but move the cursor to the beginning/end of the text, select the  option to move the cursor to the beginning or  to move the cursor to the end of the text.

The Satellites Page

Viewing the Satellites Page

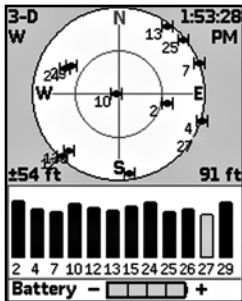

Satellites Page

Tip: If it is taking a long time for the device to obtain a 2-D or 3-D fix, verify it has a clear view of the sky. Be sure that trees, buildings, and other obstacles are not blocking the Earthmate PN-40. If the device still cannot obtain a 2-D/3-D fix, press PAGE until the Satellites Page displays, press MENU, highlight the **Set Current Location** option, and then press ENTER. The Map Page displays automatically. Pan the map to your current location and press ENTER.

Once you turn on the Earthmate PN-40, the Satellites Page appears. The Satellites Page informs you of your current GPS status, the number of satellites the Earthmate PN-40 is acquiring data from, the signal strength, the GPS accuracy (available only when a 2-D or 3-D fix is obtained), the time, and the elevation.

Note: If the device is connected to your computer, the first page you will see is the Connect to Computer page. For more information, see *Connecting to Your Computer* on page 6.

Satellite Constellation and Signal Graph

Both the satellite constellation and the satellite signal graph display visible satellites and their identifying numbers, which are assigned by the Department of Defense.

In the satellite constellation, satellite-shaped icons display each satellite's position in the sky relative to the device's current position. North, South, East, and West are shown on the graph.

In the satellite signal graph, each satellite is represented as a bar that is sized according to signal strength. Longer bars have greater strength and shorter bars have less strength.

The icons in the satellite constellation and the lines in the signal graph are color coded based on the quality of the data they are transmitting:

- **Red**—Indicates your GPS receiver is tracking the satellite, but it is not using it to navigate.
- **Green**—Indicates your GPS receiver is tracking the satellite, ephemeris data is available, and the satellite is being used for navigation.
- **Yellow**—Indicates your GPS receiver is tracking the satellite, predicted ephemeris data is available, and the satellite is being used for navigation.
- **Blue**—Indicates your receiver is tracking the satellite, ephemeris data is available, the satellite is being used for navigation, and the satellite has WAAS corrections available.

GPS and WAAS Status

GPS status displays in the top left corner of the page and displays the following, depending on your satellite acquisition status:

- **GPS Off**—The GPS is disabled.

- **No Fix**—The GPS cannot find sufficient satellite data to determine your current GPS position.
- **2-D**—The GPS connection is successful, but the connection quality is not quite as sufficient as a 3-D fix. This usually indicates insufficient data for an accurate location because only three satellites are being used or signals from the satellites are poor. Move your receiver to another location until you get better reception.
- **3-D**—The GPS receiver is receiving sufficient satellite data to determine your location.

If a W shows below 2-D or 3-D, the Earthmate PN-40 has obtained a WAAS connection. WAAS provides up to five times greater position accuracy than a regular 2-D or 3-D connection. WAAS is available only in North America.

Time

The time displays in the top right corner of the page. You can change the time format, time zone, and enable or disable Daylight Saving Time using the Time menu option in the Device Setup page.

Elevation

The elevation based on the current altimeter reading displays in the bottom right corner of the page. For information about calibrating the altimeter, see *To Calibrate the Altimeter* on page 14.

When the Auto Calibrate Altimeter option is enabled, you may see the word “Calibrating” in the bottom right corner of the screen and a red exclamation point in the Elevation: Altimeter info field as the altimeter adjusts. For more information, see *To Modify the Compass and Altimeter Settings* on page 72.


GPS Accuracy

The GPS accuracy displays in the bottom left corner of the screen in feet or meters, depending on the measurement preferences you assigned in the Device Setup Page (see *To Modify the Units Settings* on page 74 for more information). GPS accuracy is represented on the map by a circle with a radius equal to the GPS accuracy, allowing you to see a representation of your accuracy in relation to your map scale.

Battery Indicator

The battery indicator is a graphic representation of the current available battery power:

- **Four green bars**—Indicates a full charge.
- **Three green bars**—One quarter of the battery power has been used.
- **Two yellow bars**—One half of the battery power has been used.

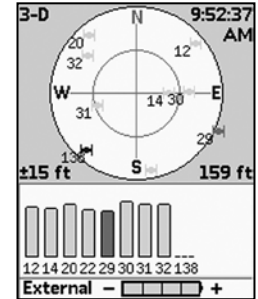

Battery indicator label changes to “external” when charging

Note: To ensure the battery indicator provides accurate information, make sure you have the correct battery type selected on the Device Setup>System page. See **To Modify the System Settings** on page 70 for more information.

Notes:

- You can disable the GPS using the Device Setup>System menu option. Select **Disable GPS** from the **GPS Settings** drop-down list.
- When GPS has been disabled, you can enable it by pressing MENU and then selecting **Enable GPS**.
- GPS is temporarily disabled when in simulate mode (during track playback, navigation simulation, and so on).
- If the Earthmate PN-40 is unable to acquire a fix after approximately ten minutes, you will be prompted to disable the GPS or continue searching for satellites.

- **One red bar**—Three quarters of the battery power has been used. Once the battery has reached 5% of its total battery power, a low battery warning displays.

While the Li-Ion battery is charging, the battery indicator graphic is animated and the word “Battery” is replaced with “Charging.” Once the battery is fully charged, the battery indicator graphic displays four static green bars and the word “Charging” is replaced with “External” until the charging cable is removed.

Calibrating Sensors

Changes in weather patterns and geographic locations can cause errors in sensor readings. Calibrating the sensors ensures that they record and display accurate data in the track file. The Calibrate menu option is available from the the Satellite Page, the Compass Page and the Device Setup>Compass & Altimeter menu option. You can also use the Compass & Altimeter menu on the Device Setup Page to disable the electronic compass and the barometric altimeter, as well as the auto calibrate altimeter feature. For more information, see *To Modify the Compass and Altimeter Settings* on page 72.

To Calibrate the Altimeter

There are three options for manually calibrating the altimeter. Units are based on your device settings. By default, the device is set to auto calibrate the altimeter using GPS elevation; however, manual calibration using the known elevation or barometric pressure provides greater accuracy. If the device is automatically calibrating, “Calibrating” appears in the bottom right corner of the Satellites Page and a red exclamation point displays in the Elevation: Altimeter info field.

1. From the Satellite Page or the Compass Page press MENU.
OR
From the Device Setup Page, use the arrow keypad to highlight **Compass & Altimeter** and press ENTER.
2. Use the arrow keypad to highlight **Calibrate** and press ENTER.
3. Highlight **Calibrate Altimeter** and press ENTER.
4. Highlight a calibration method and press ENTER:
 - **Known Elevation**—The elevation at your location. Units are based on your device settings.
With the elevation field highlighted, press ENTER. Use the arrow keypad to highlight the part

of the field you want to change. Press the arrow keypad up or down to change it. When finished entering the elevation, press ENTER, highlight **Calibrate**, and then press ENTER.

- **Known Pressure**—The barometric pressure (adjusted for sea level) for your location.

With the pressure field highlighted, press ENTER. Use the arrow keypad to highlight the part of the field you want to change. Press the arrow keypad up or down to change it. When finished entering the pressure, press ENTER, highlight **Calibrate**, and then press ENTER.

- **GPS Elevation**—The GPS elevation displays. Press ENTER.

5. When you see the message that your device is calibrated, press ENTER.

Note: If you use the Known Elevation or Known Pressure method to calibrate the altimeter, and the Enable Barometric Altimeter check box is selected in MENU>Device Setup>Compass & Altimeter, a message asks you if you want to disable it. Highlight **Yes** to disable or **No** to leave it enabled, and then press **ENTER**.

To Calibrate the Compass

There are three steps for calibrating the electronic compass. If compass accuracy is poor, “Poor Accuracy” appears in the bottom right corner of the Compass Page and a red exclamation point displays in the Heading info field.

1. From the Satellite Page or the Compass Page press MENU.
2. Use the arrow keypad to highlight **Calibrate** and press ENTER.
3. Highlight **Calibrate Compass** and press ENTER.
4. Follow the on-screen steps to calibrate the compass.

To Disable GPS

There are many features on the Earthmate PN-40 that do not require a GPS fix. You can turn off the GPS connection using the Disable GPS option in the Satellites menu.

1. From the Satellites Page, press MENU.
2. Use the arrow keypad to highlight **Disable GPS** and press ENTER.

GPS OFF displays in the top left corner of the screen and all satellites are removed from the constellation display.

Note: When the electronic compass is enabled, the Earthmate PN-40 uses it when you are stationary or almost motionless. It provides the greatest accuracy when you are not moving. When your speed is 0.5 mph or higher, the compass reading is based on the GPS location.

Note:

- Calibrate the electronic compass the first time you use the Earthmate PN-40.
- Make sure you are outside and away from magnetic fields, such as vehicles and power lines, when you calibrate the compass.
- Calibrate when you change the type of battery you are using — batteries have unique magnetic fields that affect the accuracy of the electronic compass.

The Map Page


Viewing the Map Page

If a 2-D or 3-D fix is obtained, the Map Page displays the map data that is available for your current GPS location. If a GPS fix cannot be obtained, the location of your last GPS fix displays on the map. The color of the GPS arrow depends on your GPS signal.

- A flashing red arrow indicates that the Earthmate PN-40 cannot obtain a GPS signal.
- A blue arrow indicates that the device is in Track Playback mode or Simulate Navigation mode.
- A yellow arrow indicates a 2-D fix.
- A green arrow indicates a 3-D fix.

Below the map are information fields. The information displayed in these fields varies based on the selections you choose (for more information, see *To Change the Information Fields* on page 18).

The scale is located above the information fields. A north arrow is also available in the top right corner of the screen; this is available only when Heading Up is selected as the map orientation (or Course Up is selected when navigating).

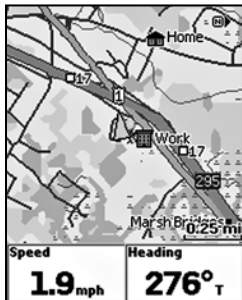

Map Page

Tip: You can hide the information fields to make the map area larger (for more information, see **To Hide the Information Fields** on page 26) or change the number of information fields that display (for more information, see **To Arrange the Information Fields** on page 26).

To View Map Data

The Earthmate PN-40 comes standard with a base map showing high-level world coverage, as well as more detailed U.S. coverage. You cannot remove the base map from memory.

Several data types are compatible with the Earthmate PN-40:

- High-resolution Cities
- Color Aerial Imagery (Color DOQQ)
- Aerial Imagery (DOQQ)
- USGS Quads (3DTQ)
- NOAA Nautical Charts
- Satellite Imagery (SAT10)
- DeLorme Topographic Data

The list above shows the default layering of the data types from top to bottom. To change the data layering, see *To Layer Your Data* on page 24.

To View Comment Details

When navigating, the View Comment Details option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, View Comment Details displays the most recent comment details viewed.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **View Comment Details** and press ENTER.

To Change Route Options

When navigating, use Route Options to stop navigating, get back on track, or switch the route type. For more information about route options, see *To Edit the Route Settings* on page 60.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Route Options** and press ENTER.
3. Highlight **Stop Navigating, Back on Track,** or **Switch to Direct Route/Switch to Road Route** and press ENTER.

To Show/Hide the Information Fields

You can hide the information fields to enlarge the map area.


1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Hide Info Fields** and press ENTER. The information fields are hidden.

Note: If Show Info Fields displays, the information fields are hidden. Press ENTER to display the information fields.

To Arrange the Information Fields

You can change the information fields to display as one wide field, one wide field and two narrow fields, four narrow fields, two wide fields, or two narrow fields.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Arrange Info Fields** and press ENTER.

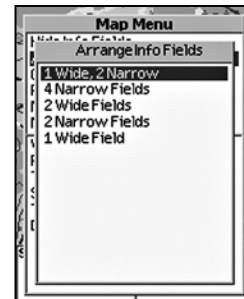

Arrange Info Fields menu option

Note: If Show Info Fields displays, the information fields are hidden. Press ENTER to display the information fields and then repeat steps 1 and 2.

4. Use the arrow keypad to select the information field style you want to view and press ENTER.

To Change the Information Fields

You can customize the information fields to display the information that is most important to you. You may want to change the information that displays based on the type of activity you are doing.

Note: The information fields change when navigating.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Change Info Fields** and press ENTER.

Note: If Show Info Fields displays, the information fields are hidden. Press ENTER to display the information fields and then repeat steps 1 and 2.

4. Highlight the information field you want to change and press ENTER. The available information field options display.
5. Use the arrow keypad to select the information field and press ENTER.
6. Press QUIT to exit Change Info mode.

The available information fields include:



Change Info Fields menu option

Notes:

- The information fields you select may be abbreviated on the screen. For example, Velocity Made Good displays as VMG.
- When information is not available (for example, the Distance to Finish information field is only pertinent when navigating), dashes (- -) display in the applicable field.

Information Field Option	Description
Back on Course	The direction of travel needed to return to the route while continuing in the direction of the destination. Expressed in degrees.
Battery Life	The percentage of battery power that remains for the Earthmate GPS PN-40.
Bearing	The direction of travel from the current location to the destination (finish or next stop). Expressed in degrees. Displays a green arrow pointing in the direction of the next waypoint or route point. The arrow is grayed out when no movement is reported by the device. It is green when the device is moving.

Information Field Option	Description
Coordinates: Primary	The coordinates for the current GPS location, cursor position, or map center in the primary format. The default is Lat/Lon. You can change the format in Device Setup> Units>Coordinates: Primary.
Coordinates: Secondary	The coordinates for the current GPS location, cursor position, or map center in the secondary format. The default is UTM/UPS. You can change the format in Device Setup> Units>Coordinates: Secondary.
Course	The direction of travel on a route from the starting location to the destination (finish or next stop). Expressed in degrees.
Device Odometer	The total distance traveled in all trips.
Distance to Finish	The distance from the current location to the route finish.
Distance to Next Stop	The distance from the current location to the next stop in the route.
Distance to Next Turn	The distance from the current location to the next turn in the route.
Elevation: Altimeter	The altitude (height) above or below sea level based on the barometric altimeter reading. If the altimeter is calibrating, a red exclamation point displays. If the altimeter is disabled, dashes display.
Elevation: GPS	The altitude (height) above or below sea level based on the GPS reading.
Elevation: Maximum	The maximum elevation achieved. Expressed in distance. This field may be reset when you clear Trip Info.
Elevation: Minimum	The minimum elevation achieved. Expressed in distance. This field may be reset when you clear Trip Info.

Information Field Option	Description
ETA at Finish	The Estimated Time of Arrival at the route finish. Expressed as hours:minutes AM/PM. ETA is based on the current device time, not on the local time at the destination.
ETA at Next Turn	The Estimated Time of Arrival at the next turn in the route. Expressed as hours:minutes AM/PM. ETA is based on the current device time, not on the local time at the turn.
ETA at Next Stop	The Estimated Time of Arrival at the next stop in the route. Expressed as hours:minutes AM/PM. ETA is based on the current device time, not on the local time at the next stop.
Finish	The Finish label as it appears in the route directions.
GPS Accuracy	The calculated accuracy of the GPS. Expressed in distance.
GPS Status	The current status of your GPS device. No Fix, 2-D, or 3-D.
Heading	The current direction of travel. Expressed in degrees. If compass accuracy is poor, a red exclamation point displays.
Moonrise/Moonset	The time of day at which the moon will rise and set. Expressed as hours:minutes AM/PM. This information is calculated for the specific geographic area where the GPS has acquired a 3-D fix.
Next Stop	The label for the next stop as it appears in the route directions.
Next Turn	The label for the next turn as it appears in the route directions. Also displays an arrow showing the direction of the turn/ route direction information.
Next Turn Arrow	The arrow representing the next turn as it appears in the route directions. No label text displays.
Off Course	The perpendicular distance between the current location and the route. Expressed in distance.

Information Field Option	Description
Pressure: Ambient	The surrounding barometric pressure setting. Set the Pressure unit type in the Units menu on the Device Setup Page.
Speed	The current rate of travel for the device. Expressed in distance per unit of time.
Speed: Average	The average speed of the device including stop time. Expressed in distance per unit of time. This field may be reset when you clear Trip Info.
Speed: Maximum	The maximum speed achieved. Expressed in distance per unit of time. This field may be reset when you clear Trip Info.
Speed: Moving Average	The average speed of the device excluding stop time. Expressed in distance per unit of time. This field may be reset when you clear Trip Info.
Sunrise/Sunset	The time of day at which the sun will rise and set. This information is calculated for the specific geographic area where the GPS has acquired a 3-D fix. Expressed as hours:minutes AM/PM.
Time/Date	The time of day and date based on the current GPS location; accounts for Daylight Saving Time and time zone adjustments. Time is expressed as hours:minutes AM/PM and date is expressed as day-month-year (for example, 01-JAN-08).
Time to Finish	The calculated time to the route finish based on road classifications and default speed settings.
Time to Moonrise/set	The time remaining until the moon rises and sets. This information is calculated for the specific geographic area where the GPS has acquired a 3-D fix.

Information Field Option	Description
Time to Next Stop	The calculated time to the next stop in the route based on road classifications and default speed settings.
Time to Next Turn	The calculated time to the next turn in the route based on road classifications and default speed settings.
Time to Sunrise/set	The time remaining until the sun rises and sets. This information is calculated for the specific geographic area where the GPS has acquired a 3-D fix.
Trip: Odometer	The total distance the GPS device has been moving. This information may be reset when you clear Trip Info.
Trip: Time Moving	The total time the GPS device has been moving. This information may be reset when you clear Trip Info.
Trip: Time Stopped	The total time the GPS has been tracking but not moving. This information may be reset when you clear Trip Info.
Trip: Time Total	The total time the GPS has been tracking, both moving and stopped. This information may be reset when you clear Trip Info.
Velocity Made Good	The component of the current speed that is in the direction of the route destination. Expressed in distance per unit of time.
Vertical Speed	The current rate of vertical travel for the device. Expressed in distance per unit of time.

To Reset the Information Fields

The Map menu offers a Restore Info Defaults option that allows you to change the custom settings you made to the Show Info Fields, Arrange Info Fields, and Change Info Fields drop-down lists back to their default settings.

Option	Default Setting
Show Info Fields	Selected
Arrange Info Fields	2 narrow fields (when tracking) 4 narrow fields (when navigating)
Change Info Fields	Speed, Heading (when tracking) Next Turn, Dist to Finish, Time to Turn, Dist to Turn (when navigating)

Use the steps below to reset the information fields to their default settings.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Restore Info Defaults** and press ENTER.

Note: If Show Info Fields displays, the information fields are hidden. Press ENTER to display the information fields and then repeat steps 1 and 2.

To Turn Imagery On/Off

You can turn on imagery to display it on the map or turn it off if you do not want to display it on the map.

1. From the Map Page, press MENU.
 2. If **Turn Imagery On** is highlighted, imagery is turned off. Press ENTER to turn on imagery.
- OR

If **Turn Imagery Off** is highlighted, imagery is turned on. Press ENTER to turn off imagery.

To Measure Distance and Area

Your Earthmate PN-40 has a measurement tool that allows you to measure the distance of a line or perimeter and area of a polygon.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Measure Distance** and press ENTER.
3. Use the arrow keypad to move the cursor to the area on the map where you want to place the first point of the line/polygon.



Measuring distance on the map

Tip: Press QUIT to delete the last measurement point. To delete the entire measurement object, press QUIT until all measurement points are deleted from the map.

4. Press ENTER to place the first point of the line/polygon on the map.
5. Repeat steps 3 and 4 for each point in the line/polygon you want to measure. The pan location information that displays in the top right corner of the screen changes to display the heading from the last measurement node to your current GPS location, the leg distance, as well as the total distance from the last measurement node to the first measurement node. It displays the area once you close a polygon.

Note: Lines must contain at least two points. To make a polygon, you must close the shape by placing the last point on top of the first point. Hover the cursor over the start location, press ENTER to snap to the point and close the polygon.

Setting up the Map

Use the Map Setup menu to customize the map by defining data type layering, showing/hiding map packages, and choosing map orientation, map style, POI detail, how waypoints display on the map, and scale.

To Layer Your Data

Use the Data Layering option in the Map Setup page to select the types of data you want to view on your Earthmate PN-40 and the order in which you want them to display. Only the data types you have on your device show in the Data Layering list. To manage data for individual map packages, see *To Show/Hide Maps from a DeLorme Mapping Program* on page 25.

The default order for layering data is:

1. GIS Layers (XMap® only)
2. Draw Layers
3. User Raster Data (XMap only)
4. ImageReg (XMap only)
5. High-resolution City Imagery
6. Color Aerial Imagery (Color DOQQ)
7. Aerial Imagery (DOQQ)
8. USGS Quads (3DTQ)



Map Setup menu options

9. NOAA Nautical Charts
10. Satellite Imagery (SAT10)
11. DeLorme Topographic Data

To open Data Layering, from the Map Page, press MENU, use the arrow keypad to highlight **Map Setup**, and press ENTER. Then, highlight **Data Layering** and press ENTER.


- To globally turn a type of data on or off so it cannot be viewed on your device, highlight it and press ENTER to clear or select the check box next to the data type.
- To change the order in which data is layered, highlight the data type, then press the arrow keypad to highlight the up or down arrow. Press ENTER to move the data type up or down in the list. Press the arrow keypad to move back to the list.
- To select/deselect all check boxes, press MENU, highlight **Select All** or **Deselect All** and press ENTER.
- To reset the default layer settings (all check boxes selected and data ordered as in the list above), press MENU, highlight **Restore Layer Defaults** and press ENTER.

To Show/Hide Maps from a DeLorme Mapping Program


After you import a map package from a compatible DeLorme mapping program, you can view or hide it on the Earthmate PN-40 using the Data Management option. You may want to hide a map to see what is underneath it; for example, raster maps are displayed above vector maps. To change the priority of how different types of map data are displayed, see *To Layer Your Data* on page 24.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Data Management** and press ENTER. The Data Management menu lists the maps that are in the device's internal memory or on an SD card in the device. A map is shown on the device if its check box is selected and is hidden if its check box is cleared.

Note: To select/deselect all check boxes, press MENU, highlight **Select All** or **Deselect All** and press ENTER.

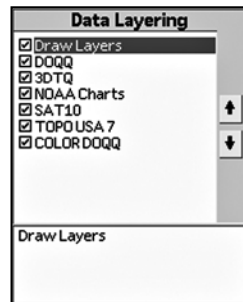

Data Layering

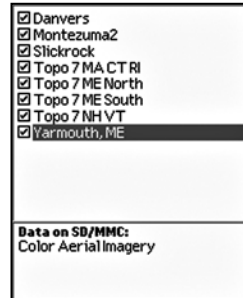

Data Management

Note: If you receive an Add Map Error message because a map is not updated for use with your device, open your mapping software, connect your device to your computer, and select the **Data Exchange** option on the device. In your software, click the **Exchange** button on the toolbar to activate the device. Then, send the map to your device. See the software's Help for more information.

Note: If you want to permanently remove the map from the Earthmate PN-40, press MENU, use the arrow keypad to highlight **Data Detail**, and press ENTER. Then, use the arrow keypad to highlight the **Delete** button, and press ENTER.



Orientation menu option

4. Highlight the map you want to hide or show. Information about the map, including the types of data and location (internal or SD card), displays in the bottom section of the screen. If you want to view more information about the map, press MENU, highlight **Data Detail**, and press ENTER. The name, zoom level, scale information, save date, location (internal or SD card), data types, and version information display. Press QUIT to return to the Data Management menu.
5. To show/hide a map, highlight it and press ENTER to select or clear the check box next to it.
6. Optional: To view the map's center on the screen, press MENU, highlight **View Map**, and press ENTER.

To Change the Map Orientation

You can change the map orientation as you move based on your preference, but note that raster maps rotate in 90° headings. Choose to make the map display:

- **North Up**—North is always represented at the top of the map screen.
- **Heading Up**—The direction in which you are traveling is always represented at the top of the map screen. Displays the North Arrow in the top right corner of the map screen.
- **Course Up**—The direction of the finish of your route is always represented at the top of the map screen. Displays the North Arrow in the top right corner of the map screen when navigating.

You can modify the map orientation using the Orientation drop-down list in the Map Setup menu.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight the **Orientation** drop-down list and press ENTER.
4. Highlight **North Up**, **Heading Up**, or **Course Up** and press ENTER.

Note: If you want Heading Up or Course Up to automatically switch to North Up above the specified scale, ensure the **North Up above ... scale** check box is selected. If not, clear the check box.

To Change the Map Style

You can change the map style using the Map Style drop-down list in the Map Setup menu. Topo View displays all topographic data as it was saved in the map package; this is the default view. Street View hides the contours and land cover for a clean road map that is easier to view when driving.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight the **Map Style** drop-down list and press ENTER.
4. Highlight **Street View** or **Topo View** and press ENTER.

To Show Hybrid Maps

You can show points, lines, and labels on top of imagery. If you select this option, it changes the draw order for the data layers but does not change the order listed on the Data Layering page. Hybrid maps are visible at a scale of 0.25 miles or higher.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. To show hybrid maps, under Map Style, highlight **Show Hybrid Map** and press ENTER to select the check box. If you do not want to show hybrid maps, clear the check box.

To Change the Level of POI Detail

Several compatible data types contain POIs (such as trails, mountains, accommodations, restaurants, and more) that display as symbols on the map. With the POI Detail option on the Map Point Management menu, change how POIs display on the map.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Map Point Management** and press ENTER.
4. Highlight the **POI Detail** drop-down list and press ENTER.
5. Highlight **Hide POIs**, **Show Major POIs**, **Show Minor POIs** or **Show All POIs** and press ENTER.

To Show/Hide Waypoint Symbols

The Hide Waypoint Symbols option lets you show or hide waypoint symbols on the map.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Map Point Management** and press ENTER.
4. Highlight the **Hide Waypoint Symbols** drop-down list and press ENTER.



Hybrid map



Map Point Management

5. Highlight the option you want to use and press ENTER.

To Use Small Waypoint Symbols

The Small Waypoint Symbols option lets you reduce the waypoint symbol size above a specific scale to reduce map clutter.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Map Point Management** and press ENTER.
4. Highlight the **Small Waypoint Symbols** drop-down list and press ENTER.
5. Highlight the option you want to use and press ENTER.

To Show/Hide Geocache Symbols

The Hide Geocache Symbols option lets you show or hide geocache symbols on the map.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Map Point Management** and press ENTER.
4. Highlight the **Hide Geocache Symbols** drop-down list and press ENTER.
5. Highlight the option you want to use and press ENTER.

To Use Small Geocache Symbols

The Small Geocache Symbols option lets you reduce the geocache symbol size above a specific scale to reduce map clutter.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight **Map Point Management** and press ENTER.
4. Highlight the **Small Geocache Symbols** drop-down list and press ENTER.
5. Highlight the option you want to use and press ENTER.

To Set the Scale

The scale option lets you set the type of scale you want to use on your maps.

1. From the Map Page, press MENU.
2. Use the arrow keypad to highlight **Map Setup** and press ENTER.
3. Highlight the **Scale** drop-down list and press ENTER.
4. Highlight **Bar**, **Zoom**, or **Ratio** and press ENTER.

Default Settings in the Map Setup Menu

The Map Setup menu default settings are as follows:

Option	Default Setting
Data Layering	GIS Layers (XMap only) Draw Layers Custom Raster (XMap only) ImageReg (XMap only) High-Resolution Cities Color Aerial Imagery Aerial Imagery (DOQQ) USGS Quads (3DTQ) NOAA Nautical Charts Satellite Imagery Custom Vector (XMap only) DeLorme Topographic Data
Orientation	Heading Up North Up above...scale
Map Style	Topo View
Show Hybrid map	Off



Scale menu options

Option	Default Setting
Map Point Management	
POI Detail	Show Major POIs
Hide Waypoint Symbols	Never
Small Waypoint Symbols	Never
Hide Geocache Symbols	Never
Small Geocache Symbols	Never
Scale	Bar

The Compass Page

Viewing the Compass Page

The Compass Page is a graphic representation of a traditional floating needle compass. Its appearance differs if you are navigating a route or tracking.

When the electronic compass is enabled, the Earthmate PN-40 uses it when you are stationary or almost motionless. When you are not moving, it provides the greatest accuracy. When your speed is 1.5 mph or higher, the compass reading is based on your GPS location.

The compass rotates so that the heading is always up. You can set the bearing arrow so that when you are navigating it points in the direction of the next stop (direct route) or it points back on course (road route).

When the electronic compass reading is not accurate, "Poor Accuracy" displays in the bottom right corner of the screen, and a red exclamation point appears in the Heading info field. When you see this indicator, you may want to calibrate the compass, unless you know the inaccuracy is caused by a temporary event, such as being near power lines or near a magnetic field, such as a car.

To Enable or Disable the Electronic Compass


By default, the electronic compass is enabled, but you can disable it.

1. From the any default page, press MENU.
2. Use the arrow keypad to highlight **Device Setup** and press ENTER.
3. Highlight **Compass & Altimeter** and press ENTER.
4. To enable or disable the electronic compass, highlight **Enable Electronic Compass** and press ENTER to select or clear the check box. Then press QUIT to exit the page.

To Calibrate the Compass

Use the following steps to calibrate the compass.

1. From the Compass Page or the Satellites Page, press MENU.
OR
From the Device Setup Page, use the arrow keypad to highlight **Compass & Altimeter** and press ENTER.
2. Highlight **Calibrate** and press ENTER.

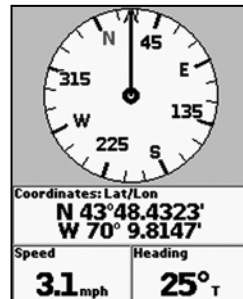


Compass Page

Note:

- Calibrate the electronic compass the first time you use the Earthmate PN-40.
- Make sure you are outside and away from magnetic fields, such as vehicles and power lines, when you calibrate the compass.
- Calibrate when you change the type of battery you are using — batteries have unique magnetic fields that affect the accuracy of the electronic compass.

3. Highlight **Calibrate Compass** and press ENTER.
 4. Follow the on-screen instructions. If calibration is successful, press ENTER.
- OR

If calibration fails, you can retry or press QUIT to exit the page.

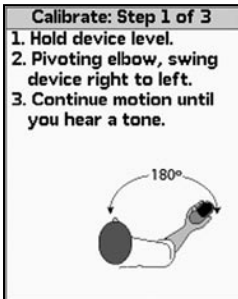

Calibrating the Compass

To Change the Route Arrow

Follow these steps to change the direct route arrow direction. Direct to Next Waypoint points to the next stop for direct routes. Back on Course points back to a road route when you are off course.

1. From the Compass Page, press MENU.
2. Use the arrow keypad to highlight **Direct Route Arrow**, and press ENTER.
3. Highlight **Direct to Next Waypoint** or **Back on Course** and press ENTER.

To View Comment Details

When navigating, the View Comment Details option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, View Comment Details displays the most recent comment details viewed.

1. From the Compass Page, press MENU.
2. Highlight **View Comment Details** and press ENTER.

To Change Route Options

When navigating, use Route Options to stop navigating, get back on track, or switch the route type. For more information about route options, see *To Edit the Route Settings* on page 60.

1. From the Compass Page, press MENU.
2. Use the arrow keypad to highlight **Route Options** and press ENTER.
3. Highlight **Stop Navigating**, **Back on Track**, or **Switch to Direct Route/Switch to Road Route** and press ENTER.

To Arrange the Information Fields

You can change the information fields to display as one wide and two narrow fields, four narrow fields, or two wide fields.

1. From the Compass Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Arrange Info Fields** and press ENTER.
4. Highlight the information field style you want to view and press ENTER.

To Change the Information Fields

You can customize the information fields to display the information that is most important to you.

You may want to change the information that displays based on the type of activity you are doing.

Note: The information fields change when navigating.

1. From the Compass Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Change Info Fields** and press ENTER.
4. Highlight the information field you want to change and press ENTER. The available information field options display.
5. Highlight the information field you want to use and press ENTER.
6. Press QUIT to exit Change Info mode.

To Restore the Information Fields to their Default Settings

Use the steps below to reset the information fields to their default settings.

1. From the Compass Page, press MENU.
2. Use the arrow keypad to highlight **Info Fields** and press ENTER.
3. Highlight **Restore Info Defaults** and press ENTER.

The Trip Info Page

Viewing the Trip Info Page

The Trip Info Page includes eight information fields that occupy the entire screen (three information fields display if the Earthmate PN-40 is in large text mode). You can customize each field with one of the many available information field options. See page 18 for a table of the information field options.

Coordinates: Lat/Lon N 46°10.043' W 68°51.173'	
Trip:Odometer 39.02 mi	
Trip Moving 00:25:43	Speed 5 mph
Trip Stopped 00:00:27	Max Speed 8 mph
Trip Total 00:26:10	Avg Speed 3 mph

Trip Info Page

To View Comment Details

When navigating, the View Comment Details option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, View Comment Details displays the most recent comment details viewed.

1. From the Trip Info Page, press MENU.
2. Highlight **View Comment Details** and press ENTER.

To Change Route Options

When navigating, use Route Options to stop navigating, get back on track, or switch the route type. For more information about route options, see *To Edit the Route Settings* on page 60.

1. From the Trip Info Page, press MENU.
2. Use the arrow keypad to highlight **Route Options** and press ENTER.
3. Highlight **Stop Navigating**, **Back on Track**, or **Switch to Direct Route/Switch to Road Route** and press ENTER.

To Change the Information Fields

You can customize the information fields to display the information that you want to see. You may want to change the information that displays based on the type of activity you are doing.

Note: The information fields change when navigating.

1. From the Trip Info Page, press MENU.
2. Use the arrow keypad to highlight **Change Info Fields** and press ENTER.
3. Highlight the information field you want to change and press ENTER. The available information field options display.

4. Highlight the information field you want to use and press ENTER.
5. Press QUIT to exit Change Info mode.

To Show Large Text

Use the Switch to Show Large Text option to view large information fields. The information fields vary depending on if you are tracking or navigating.

1. From the Trip Info Page, press MENU.
2. Use the arrow keypad to highlight **Switch to Show Large Text** and press ENTER.

Note: The Switch to Show Large Text option changes to Switch to Show Small Text when the large text option is activated.

To Reset the Trip Information

Use the Reset Info option in the Trip Info menu to start a new trip and reset the odometer, speed information, or elevation information.

1. From the Trip Info Page, press MENU.
2. Use the arrow keypad to highlight **Reset Info** and press ENTER.
3. To reset the trip odometer, time moving, time stopped, and time total, highlight **Reset Trip Values**. Press ENTER to select the check box. Press ENTER again to clear it.

OR

To reset the average speed, maximum speed, and moving average values, highlight **Reset Speeds**. Press ENTER to select the check box. Press ENTER again to clear it.

OR

To reset the minimum and maximum elevation information, highlight **Reset Elevations**. Press ENTER to select the check box. Press ENTER again to clear it.

OR

To reset the device odometer, use the arrow keypad to highlight **Reset Device Odometer**. Press ENTER to select the check box. Press ENTER again to clear it.

Note: Resetting Trip Values resets the trip odometer for the current Trip Info reading, while resetting Device Odometer resets the cumulative odometer for all trips on the device.

4. Highlight **Reset Now** and press ENTER.



Show Large Text menu option



Reset Trip Values menu option

Tip: Interested in seeing how far you've traveled for a month, season, or year? If so, restore all of the options except the Device Odometer to keep track of your total mileage.

To Restore the Information Fields to their Default Settings

Use the steps below to reset the information fields to their default settings.

1. From the Trip Info Page, press MENU.
2. Use the arrow keypad to highlight **Restore Info Defaults** and press ENTER.

The Find Page

Using the Find Page

You can use the Find button (the one with a magnifying glass) to search for addresses, roads, cities, points of interest, waypoints, geocaches, coordinates, and more. There are two Find search options: **Find Near Map Center**, which is the default setting, or **Find By Name**.

Use the Find Near Map Center search option to search for categories of information, such as geographic features, waypoints, points of interest, and more, near your current map center. The number of search results returned is based on available search results, not on distance. Find Near Map Center searches stop after 100 search results are found.

Use the Find By Name search option to search for a specific location, such as an address or point of interest. To narrow your search results, you can choose either the Name Contains or Name Begins With option to search for results that contain or begin with certain characters.

The first time you search, press MENU to set up your search. To change your Find search option, press MENU. The available options are preceded by "Switch to." Highlight the option you want to use and press ENTER. Your last search method is saved until you change it.

To Find a Waypoint

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, highlight **Waypoints**, and press ENTER.

OR

For a **Find By Name** search, use the arrow keypad to highlight the **Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

3. Highlight the **Symbol** field and press ENTER.
4. Highlight the symbol type you want to search for and press ENTER. Only the symbols you have on your device are shown. For a complete list of all of the symbol types, see *Appendix C* on page 87.
5. Highlight the search result that you want to find and press ENTER.

Notes:

- Press a button during a search to halt the search process. Select **Continue Search** to resume the search process.
- To refine a Find By Name search, enter as much search criteria as possible. Leave the Name field blank to find all results for the search category in a specified area.
- Find search results vary based on the map data type you are searching within.
- To view the 10 most recent Find search results, select **Recent Finds** from the **Show** drop-down list in the Find Page.
- The Find Page retains your most recent search parameters.



Waypoint search results

- To delete the waypoint, highlight **Delete** and press ENTER. A confirmation message displays. Highlight **OK** and press ENTER.
OR
To center the map on the location, highlight **View** and press ENTER.
OR
To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find a Geocache

- Press the **Find** button.
- For a Find Near Map Center search, use the arrow keypad to highlight the **Show** field, press ENTER, highlight **Geocaches**, and press ENTER.
OR
For a Find By Name search, use the arrow keypad to highlight the **Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.
- Highlight the **Symbol** field and press ENTER.
- Highlight the symbol type you want to search for and press ENTER. Only the symbols you have available on your device are shown. For a complete list of the symbol types see *Appendix C* on page 87.
- Highlight the search result that you want to find and press ENTER.
- To delete the geocache, highlight **Delete** and press ENTER. A confirmation message displays. Highlight **OK** and press ENTER.
OR
To center the map on the location, highlight **View** and press ENTER.
OR
To create a route from your current location to the search result, highlight **Route** and press ENTER. On the Route to Geocache menu, highlight **Drive to Cache** or **Hike to Cache** and press ENTER. For more information, see *To Create a Route to a Geocache* on page 52.

To Find a Point of Interest

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, highlight **Points of Interest**, and press ENTER.

OR

For a **Find By Name** search, use the arrow keypad to highlight the **Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

Narrow this search by completing one or more of the remaining fields. Highlight the field and press ENTER to use the keyboard to enter the search information. Then, highlight **OK** and press ENTER.

3. To further narrow your search, highlight the **Category** field and press ENTER. A list of point of interest categories displays. Highlight the category you want and press ENTER.
4. Highlight the search result that you want to find and press ENTER.
5. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, highlight **View** and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find Natural Features

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, select **Natural Features**, and press ENTER.

OR

For a **Find By Name** search, use the arrow keypad to highlight the **Name** field and press



Searching for points of interest with the Find Page

Note: Not all map data types include natural features.



Searching for natural features

ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

Narrow this search by completing one or more of the remaining fields. Highlight the field and press ENTER to use the keyboard to enter the search information. Then, highlight **OK** and press ENTER.

3. To further narrow your search, highlight the **Category** field and press ENTER. A list of natural feature categories displays. Highlight the category you want and press ENTER.
4. Highlight the search result that you want to find and press ENTER.
5. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, highlight **View** and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find an Address

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, select **Addresses**, and press ENTER.

OR

For a **Find By Name** search, use the arrow keypad to highlight the **Street Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

Narrow this search by completing one or more of the remaining fields. Highlight the field and press ENTER to use the keyboard to enter the search information. Then, highlight **OK** and press ENTER.

3. Highlight the search result that you want to find and press ENTER.



Searching for an address by name

4. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, highlight **View** and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find a Coordinate

1. Press the **Find** button.
2. Use the arrow keypad to highlight the **Show** field, press ENTER, and then select **Coordinates**.
3. Highlight the position field and then press ENTER. Highlight the coordinate letters/numbers you want to change and use the arrow keypad to move the letter/number up or down. Then, press ENTER.
4. Highlight the search result that you want to find and press ENTER.
5. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, highlight **View** and press ENTER.


OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find a Street/Trail

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, select **Streets/Trails**, and press ENTER.

OR

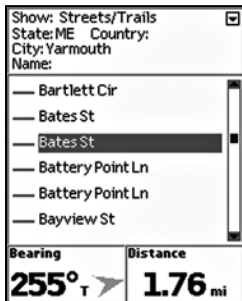

Searching for a street/trail

For a **Find By Name** search, use the arrow keypad to highlight the **Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

Narrow this search by completing one or more of the remaining fields. Highlight the field and press ENTER to use the keyboard to enter the search information. Then, highlight **OK** and press ENTER.

3. Highlight the search result that you want to find and press ENTER.
4. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, use the arrow keypad to highlight the **View** button and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find a City

1. Press the **Find** button.
2. For a **Find Near Map Center** search, use the arrow keypad to highlight the **Show** field, press ENTER, select **Cities**, and press ENTER.

OR

For a **Find By Name** search, use the arrow keypad to highlight the **Name** field and press ENTER. Use the arrow keypad to enter the name on the keyboard. Then, highlight **OK** and press ENTER.

Narrow this search by completing one or more of the remaining fields. Highlight the field and press ENTER to use the keyboard to enter the search information. Then, highlight **OK** and press ENTER.

3. Highlight the search result that you want to find and press ENTER.

4. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, use the arrow keypad to highlight the **View** button and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find Draw or GIS Layers

These options are available if you have a draw or GIS layer enabled; GIS layers are available only in maps created with XMap. For more information, see *To View Map Data* on page 16.

1. Press the **Find** button. The Find Page displays.
2. Use the arrow keypad to highlight the **Show** field, press ENTER, and then select **Draw Layers** or **GIS Layers**.
3. To find location values, highlight the position field and then press ENTER. Highlight the coordinate letters/numbers you want to change and use the arrow keypad to move the letter/number up or down. Then, press ENTER.
4. Highlight the search result that you want to find and press ENTER.
5. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

OR

To center the map on the location, highlight **View** and press ENTER.

OR

To create a route from your current location to the search result, highlight **Route** and press ENTER. For more information, see *To Create a Route* on page 56.

To Find Recent Search Results

You can view a history of the past ten search results for which you have viewed details.

1. Press the **Find** button.
2. Use the arrow keypad to highlight the **Show** field, press ENTER, select **Recent Finds**, and press ENTER.
3. Highlight the search result that you want to find and press ENTER.
4. To save the location as a waypoint, highlight **Mark** and press ENTER. Use the arrow keypad or keyboard to update the label, coordinates, elevation, and comments. Press ENTER after you edit each group of information.

The Waypoints Page

Using the Waypoints Page

To open the Waypoints Page and display your list of waypoints, press MENU, highlight **Waypoints**, and press ENTER. If you have added the Waypoints Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears. There are two ways to sort your list of waypoints. **Sort by Name** is the default setting, and it sorts your list of waypoints in alphabetical order. **Sort by Distance** sorts the list by the distance from your GPS location (or cursor location when panning the map). When you are sorting by distance, if you have a large number of waypoints a progress bar displays; press the ENTER button at any time to stop the search. To change the sorting method, press MENU. The available option is preceded by “Switch to.” Highlight the option and press ENTER.

Using the Mark Button

You can use the Mark button (the button with a push pin) on the Earthmate PN-40 to mark a waypoint at your current GPS location or, if panning, at the cursor position. If you are not panning and your are not using GPS, the current map center is used. You can also add a waypoint at a search result when using the Find function.

After you add a waypoint, you can customize the waypoint name, symbol, coordinates, elevation, time/date, and comments. When you add a waypoint and then add more waypoints using that symbol and name, they are numbered in order. For example, if you keep the default name of Wpt 001, the first waypoint is Wpt, the second one is Wpt 002, and so on. Your most recent name is used until you change it.

Use the Waypoint Detail Menu to view comment details, delete the waypoint, move the waypoint to the current GPS location, or average the waypoint. To view the Waypoint Details Menu, press MENU from a Waypoint Detail page.

To Mark a Waypoint

Press the **Mark** button to place a waypoint. The Waypoint Detail page displays.


- To use a waypoint symbol other than the default red pin, use the arrow keypad to highlight the default waypoint symbol and press ENTER. Then, browse to the symbol you want, highlight it, and press ENTER.

Symbol/Label 📍 Saints John		
Coordinates: Lat/Lon N 39°34.2564' W105°52.9349'		
Elevation +10805 ft	Time/Date 12:25 PM 31-Jan-09	
Comments Mining ghost town		
Delete	View	Route

Use the Waypoint Details Page to customize waypoint information

Note: If you panned to the location where you marked the waypoint, elevation information is not available.

Note: To ensure your waypoint displays on the Waypoints Page, make sure you select a waypoint symbol. If you use a geocache symbol, the waypoint will be saved in the Geocaches Page. For a list of symbols, see **Appendix C** on page 87.

Tip: Select  to enter more than one line of text in a comment.

GPS Status	
3-D DGPS	
Coordinates: Lat/Lon N 43°48.4748' W 70° 9.8076'	
Elevation	Readings
170 ft	18
Estimated Accuracy	
±4 ft	
Ok	

Averaging a waypoint

- To change the waypoint label, use the arrow keypad to highlight the default label and press ENTER. Use the keyboard to enter the new label text. Then, highlight **OK** and press ENTER.
- To change the coordinate location of the waypoint, use the arrow keypad to highlight the **Coordinates** field and press ENTER. Then, highlight the number in the coordinate information you want to change. Use the arrow keypad to increase/decrease the number. Press ENTER when finished.
- To change the elevation of the waypoint, use the arrow keypad to highlight the **Elevation** field and press ENTER. Then, highlight the number in the elevation value you want to change. Use the arrow keypad to increase/decrease the number. Press ENTER when finished.
- To change the date and time that you added to the waypoint, use the arrow keypad to highlight the **Time/Date** field and press ENTER. Then, highlight the number in the time/date information you want to change. Use the arrow keypad to move the number up or down. Press ENTER when finished.
- To add comments relating to the waypoint, use the arrow keypad to highlight the **Comments** field and press ENTER. Use the keyboard to enter your comment text. Then, highlight **OK** and press ENTER.
Note: If the comment length exceeds the comment area, press MENU and highlight **View Comment Details** to display the entire comment.
- To save the waypoint, use the arrow keypad to highlight **Save** and press ENTER.

To Average a Waypoint

When a waypoint is averaged, a series of GPS readings for the waypoint's location is recorded and averaged to increase the positional accuracy of the waypoint. You can average a waypoint only at your current GPS location.

Note: You can also use the Waypoint Detail Menu to begin averaging the selected waypoint or to average a saved waypoint. If the waypoint has already been averaged, the Readings and Estimated Accuracy continue to update, giving you historical information.

1. Mark a waypoint at your current GPS location but do not save it (for more information, see *To Mark a Waypoint* on page 45).
2. Use the arrow keypad to highlight the **Avg** button and press ENTER. The GPS status,

coordinates, elevation, number of readings at the location, and estimated accuracy display. The more readings you record, the greater the positional accuracy of the waypoint. A small estimated accuracy number indicates that the waypoint is very close to its actual coordinates.

3. Highlight **OK** and press ENTER.
4. Highlight **Save** and press ENTER.

To View/Center a Waypoint on the Map

Find the waypoint you want to edit using the Waypoints Page or Find search (see *To Find a Waypoint* on page 37).

1. Use the arrow keypad to highlight the waypoint you want to view on the map. The Bearing information field displays the bearing from your current GPS location or cursor position to the selected waypoint. It includes an arrow that points in the direction of the waypoint, based on the current GPS heading. The Distance information field displays the distance from your current location to the selected waypoint.
2. Press ENTER to view the waypoint details.
3. Highlight **View** and press ENTER.

To View/Edit Waypoint Details

Find the waypoint you want to view/edit using the Waypoints Page or Find search (see *To Find a Waypoint* on page 37). The following actions are available from the Waypoint Detail page:

- To change the symbol of the waypoint, highlight the waypoint symbol and press ENTER. Then, browse to the symbol you want, highlight it, and press ENTER. Make sure you choose a waypoint symbol. If you choose a geocache symbol it will move the waypoint to the Geocaches Page. For a list of symbols, see *Appendix C* on page 87.
- To change the waypoint label, highlight the default label and press ENTER. Use the keyboard to enter the new label text. Then, highlight **OK** and press ENTER.
- To change the coordinate location of the waypoint, highlight the **Coordinates** field and press ENTER. Then, highlight the number in the coordinate information you want to change. Use the arrow keypad to move the number up or down. Press ENTER when finished.
- To change the elevation of the waypoint, highlight the **Elevation** field and press ENTER. Then, highlight the number in the elevation value you want to change. Use the arrow keypad to



Waypoints list

Note: You can also select a waypoint by panning to it on the map and pressing ENTER.

move the number up or down. Press ENTER when finished.

- To change the date and time when you added the waypoint, to highlight the **Time/Date** field and press ENTER. Then, highlight the number in the time/date information you want to change. Use the arrow keypad to move the number up or down. Press ENTER when finished.
- To add or change comments for the waypoint, highlight the **Comments** field and press ENTER. Highlight **Edit Comment Details** and press ENTER. Use the keyboard to enter your text. Then, highlight **OK** and press ENTER.
- To view comment details for the waypoint if they are larger than the display, highlight the **Comments** field and press ENTER. Highlight **View Comment Details** and press ENTER. You can also press MENU, highlight **View Comment Details** and press ENTER. Also see, *To View Comment Details When Navigating* below.

Your edits are automatically saved. Press QUIT to return to the Waypoints Page.

To Create a Route to a Waypoint

1. View the Waypoint Detail page for the waypoint to which you want to navigate.
2. To create a route to the waypoint from your current GPS location, highlight **Route** and press ENTER. Then, on the Route Detail page, highlight **Navigate** and press ENTER to calculate the route.

To View Comment Details When Navigating

When navigating, the View Comment Details option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, View Comment Details displays the most recent comment details viewed.

1. From the Waypoint Page, press MENU.
2. Highlight **View Comment Details** and press ENTER.

To Change Route Options

When navigating, use Route Options to stop navigating, get back on track, or switch the route type. For more information about route options, see *To Edit the Route Settings* on page 60.

1. From the Waypoints Page, press MENU.
2. Use the arrow keypad to highlight **Route Options** and press ENTER.

3. Highlight **Stop Navigating, Back on Track,** or **Switch to Direct Route/Switch to Road Route** and press ENTER.

To Move a Waypoint to the Current GPS Location

1. View the Waypoint Detail page for the waypoint you want to move to your current GPS location.
2. Press MENU, highlight **Move to GPS Location** and press ENTER.
3. When you see the confirmation message, highlight **Yes** and press ENTER to move the waypoint.

To Delete a Waypoint

1. View the Waypoint Detail page for the waypoint you want to delete.
2. Highlight **Delete** and press ENTER.
3. When you see the confirmation message, highlight **Yes** and press ENTER to delete the waypoint.

To Delete Waypoints by Symbol

1. From the Waypoints Page, press MENU.
2. Use the arrow keypad to highlight **Delete by Symbol** and press ENTER. A list of waypoint symbols in use on your device displays.
3. For each symbol you want to delete, highlight the symbol and then press ENTER to select the check box next to it.
4. Highlight **Delete** and press ENTER.
5. When you see the confirmation message, highlight **Yes** and press ENTER to delete waypoints with the selected symbols.

To Delete All Waypoints

1. From the Waypoints Page, press MENU.
2. Use the arrow keypad to highlight **Delete all Waypoints** and press ENTER.
3. On the Manage Memory screen, the Delete All Waypoints check box is selected and Delete Now is highlighted. Press ENTER.
4. When you see the confirmation message, highlight **Yes** and press ENTER to delete all waypoints.

The Geocaches Page

Getting Started with the Geocaches Page



The Geocaches Page

Use the Geocaches Page to manage your geocaching activities. Geocaches are a special type of waypoint that use geocache symbols from geocaching.com.

To use all of the features available with the Geocaches Page, use the **Send to GPS** feature available to members of Geocaching.com. To use this feature, you must first download the DeLorme Send to GPS Plugin to your computer from the the DeLorme website (<http://www.delorme.com/geocaching/plugin/>).

If you use DeLorme mapping software (XMap 6.1 or earlier or Topo USA 7.0 or earlier) to transfer .loc or .gpx files to your Earthmate PN-40, some features will not be available to you—future software releases will include this functionality. To learn how to send .loc or .gpx files to your device with your DeLorme mapping program, see the program's PN-Series Help topics.

To Send a Geocache with the Send to GPS Plugin

You can send one geocache at a time to the Earthmate PN-40 with the DeLorme Send to GPS plugin. You must be logged in to Geocaching.com to use this feature. Please note that geocache descriptions and hints are available through Send to GPS only for Premium Members of Geocaching.com.

1. Connect your Earthmate PN-40 to your computer.
2. On the Connect to Computer page, highlight **Data Exchange** and press ENTER.
OR
Press MENU, highlight **Device Setup**, press ENTER, highlight **Connect to Computer**, press ENTER, highlight the **USB Setting** drop-down list, select **Data Exchange**, and press ENTER.
3. On Geocaching.com, use the Seek a Cache feature to find the geocaches in your area of interest.
4. From the results list click the **Send to GPS** icon, or view the view the geocache's details and click the **Send to GPS** button.
The DeLorme Send to GPS plugin opens and transfers the geocache to your device.
5. Repeat step 4 to send each geocache you want to look for.

To View the Geocaches Page

To open the Geocaches Page and view geocaches you have added to your Earthmate PN-40, press MENU, highlight **Geocaches**, and press ENTER. If you have added the Geocaches Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears. For a list of geocache symbols, see *Appendix C* on page 87.

From the Geocaches Page, press MENU to view or change the way the geocaches are sorted and displayed.

- **Sort by Distance**—This is the default setting. Sorts the list by the distance from your GPS location (or cursor location when panning the map). When you are sorting by distance, if you have a large number of geocaches a progress bar displays; press the ENTER button at any time to stop the search. Show Not Found shows the geocaches you have not marked as found.
OR
- **Sort by Name**—Sorts the list in alphabetical order.
AND
- **Show Not Logged**—This is the default setting. Shows the geocaches you have not yet logged.
OR
- **Show Logged**—Shows the geocaches you have logged. This includes Found It!, Didn't Find It, Write Note, or Needs Maintenance statuses.

To change the sorting method or display option, press MENU. The available option is preceded by "Switch to." Highlight the option you want and press ENTER.

The Bearing and Distance info fields at the bottom of the screen show the direction and distance from your current GPS location to the geocache. As you scroll through the list, you see this information for each geocache.

Note that geocaches transferred to the Earthmate PN-40 using the DeLorme Send to GPS plugin use symbols from Geocaching.com, while, at the current time, geocaches transferred from a DeLorme mapping program use the PN-Series closed treasure chest geocache symbol.

To View/Center a Geocache on the Map

Find the geocache you want to view or center on the map using the Geocache Page or Find search (see *To Find a Geocache* on page 38).

Note: You can also select a geocache by panning to it on the map and pressing ENTER.

1. From the Geocaches Page, highlight the geocache you want to view.
2. Press ENTER to view the geocache details.
3. Highlight **View** and press ENTER.

Symbol/Label 📍 Bears In The Bushes	
Coordinates: Lat/Lon N 43°48.4170' W070°09.9340'	
Elevation +00000 ft	Time/Date 04:17 PM 26-Feb-09
Comments Bears In The Bushes by Team DeLorme	
Delete View Route	

Geocaches Details Page

To View/Edit Geocache Details

Find the geocache you want to view/edit using the Geocache Page or Find search (see *To Find a Geocache* on page 38).

Typically, you will not need to edit geocache details. If you want to update geocache details, you can use the same steps as to update waypoint details. For more information, see *To View/Edit Waypoint Details* on page 47.

Notes:

- If you edit a geocache symbol, be aware that any changes may affect where the geocache is stored. For example, if you choose a waypoint symbol, the geocache will move to the Waypoints Page and if you change a symbol from a not logged to a logged symbol type, it will move from the Show Not Logged to the Show Logged list. For a list of symbols, see *Appendix C* on page 87.
- You cannot edit geocache comment details for geocaches with cache IDs (those transferred to the device using the Send to GPS option).
- Changes you make to the geocache details on your device do not update information on Geocaching.com.

To Create a Route to a Geocache

1. View the Geocache Detail page for the geocache to which you want to navigate.
2. Highlight **Drive to Cache** (for a road route) or **Hike to Cache** (for a direct route) and press ENTER. Routes to geocaches are not saved on the device.

Note: To change the route type, see *To Change Route Options* on page 48.

To View Comment Details

- From the Geocache Detail page, press MENU, highlight **View Comment Details**, and press ENTER.
- When navigating, from any default page (except the Satellites Page), press MENU, highlight

Note:

- Press the **Out** button to move through the comment one page at a time.
- Press the **Up** arrow on the arrow keypad to quickly move to the end of the comment.

View Comment Details and press ENTER. The View Comment Details menu option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, the most recent comment details viewed display.

To Log a Geocache

Once you get to the geocache, or even if you do not find it, you can log your visit.

1. If you are navigating, press MENU from any default page (except the Satellites Page), highlight **Log Your Geocache Find** and press ENTER.

OR

If you are not navigating, from the Geocache Detail page, press MENU, highlight **Log Your Geocache Find** and press ENTER.

2. Highlight one of the options: **Found It!**, **Didn't Find It**, **Write Note**, or **Maintenance**. Any of these actions changes the geocache symbol to the one on the button you choose and moves the geocache to the Show Logged List (see *To View the Geocaches Page* on page 51 for more information on sorting).
3. If you sent the geocache to your device using the Send to GPS plugin or it has a cache ID, the Field Notes page opens. Log your geocache, highlight **Done** and press ENTER. For more information about field notes, see the next section, *To Create Field Notes*.

OR

If you sent the geocache to your device using your DeLorme mapping software, you will see a message that field notes are unavailable. Press ENTER.


4. If you are navigating, on the Next Geocache menu, highlight **Find Next Closest** (finds the next closest geocache that is not logged), **View List**, or **Stop Geocaching** and press ENTER.

OR

If you are not navigating, you will return to the Geocache Detail page.

To Create Field Notes

If you sent your geocaches to your Earthmate PN-40 using the Send to GPS plugin or it has a cache ID, you can create field notes when you log your geocache. Once you get back to your computer

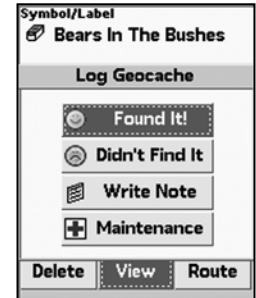

Log your find

Note: SL-Signed Log
TFTC – Thanks for the Cache
TFTH-Thanks for the Hide
TNLN-Took Nothing Left
Nothing
TB-Took Travel Bug
LTB-Left Travel Bug
FTF-First to Find.

Field Notes

Bears In The Bus...

Quick Notes

SL Add

TFTC SL
Buried in snow.

Include Signature
resultsmayvary
Yarmouth, Maine

Done

Create a field note

you can upload your field notes to Geocaching.com.

1. Follow steps 1 and 2 in the previous section, To Log a Geocache.
2. On the Field Notes page, you can enter the following information:
 - **Quick Notes**—This drop-down list includes a list of acronyms used by geocachers for logging caches. See the note box for a list of what the acronyms mean. Use the arrow keypad to select a note, then highlight **Add** and press ENTER. You can add multiple notes.
 - **Your Notes**—You can add your own notes to the note area. Highlight the note area and press ENTER. Use the keyboard to enter text, highlight OK, and then press ENTER.
 - **Signature**—At the bottom of the screen, you can enter a 2-line signature. Ensure the Include Signature check box is selected to automatically add your signature to field notes. Highlight the signature area and press ENTER. Use the keyboard to enter your signature, highlight OK, and then press ENTER.
3. When you are finished entering your note, highlight **Done** and press ENTER.

To Upload Field Notes

If you sent geocaches to your device using the Send to GPS plugin, you can use the Geocaching.com Field Notes option to upload field notes from your device to your computer.

1. Connect the your Earthmate PN-40 to your computer.
2. If the Connect to Computer page opens, highlight **Data Exchange** and press ENTER.
3. From the Geocaches Page, press MENU, highlight **Upload Field Notes** and press ENTER.
4. On Geocaching.com, locate the Earthmate PN-40 Field Notes page (Field Notes are under your profile).
5. Click the **Browse** button on the web page and go to the Earthmate PN-40's internal drive (EM_USERMAPS).
6. Select the file named "FieldNotes.txt" and click the **Upload** button on the web page to upload your Field Notes.
7. On your EarthmatePN-40, press the ENTER button to return to normal GPS use.
8. Once you upload your file, we recommend you delete it from the Earthmate PN-40. If you don't new notes will be added to the same file.

To Move a Geocache to the Current GPS Location

1. View the Geocache Detail page for the geocache you want to move to your current GPS location.
2. Use the arrow keypad to highlight the geocache and press ENTER.
3. Press MENU, highlight **Move to GPS Location**, and press ENTER.
4. When you see the confirmation message, highlight **Yes** and press ENTER.

To Delete a Geocache

1. View the Geocache Detail page for the geocache you want to delete.
2. Highlight **Delete** and press ENTER.
3. When you see the confirmation message, highlight **Yes** and press ENTER.

To Delete Geocaches by Symbol

1. From the Geocaches Page, press MENU.
2. Use the arrow keypad to highlight **Delete by Symbol** and press ENTER. A list of geocache symbols in use on your device displays.
3. For each symbol you want to delete, highlight the symbol and then press ENTER to select the check box next to it.
4. Highlight **Delete** and press ENTER.
5. When you see the confirmation message, highlight **Yes** and press ENTER to delete geocaches with the selected symbols.

To Delete All Geocaches

1. From the Geocaches Page, press MENU.
2. Use the arrow keypad to highlight **Delete all Waypoints** and press ENTER.
3. On the Manage Memory page, the Delete All Geocaches check box is selected and Delete Now is highlighted. Press ENTER.
4. When you see the confirmation message, highlight **Yes** and press ENTER to delete all geocaches.

The Routes Page

Using the Route Page

To open the Routes Page, press MENU, highlight **Routes**, and press ENTER.

There are many ways to create routes on the Earthmate PN-40. You can create a route:

- From your current GPS location to a waypoint or geocache.
- From your current GPS location to a Find search result.
- Between two waypoints.
- Between two Find search results.
- Between a waypoint and a Find search result.

Once you have created a route, you can view the route and its directions, edit the route, delete the route, and more. Routes are listed in order of use or creation; the most recent route is listed first.

Note: For more information about routing while geocaching, see *The Geocaches Page* section starting on page 50.

To Create a Route

1. From the Routes Page, use the arrow keypad to highlight the **New** button and press ENTER.
2. To name the route, (the default name is New Route; once you add a point, the default name changes to To <destination>), highlight the **Route Name** field and press ENTER. Use the keyboard to name the route. Then, highlight **OK** and press ENTER.
3. To add a route point, highlight **Add Point** and press ENTER.

To use the Find option to add a point, highlight **Use Find** and press ENTER (for more information, see *The Find Page* section that starts on page 37). After you find the point, highlight the result, press ENTER, and then highlight **Add** and press ENTER to add the search result as a point in the route.


OR

To select a route point that is on the map, highlight **Use Map** and press ENTER to pan to the location on the map that you want to use as a route point. Once you move the cursor to the location you want, press ENTER. Pan to place additional points using the map or press QUIT to



Routes Page

Note: Active routes display in the Routes Page in bold text.

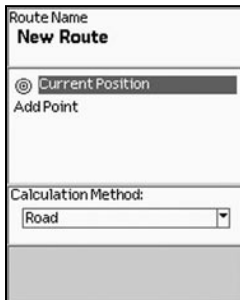

Creating a new route

return to the route creation page.

Repeat this step for each point you want to include in your route.

- Optional: If you do not want to include your current GPS position as a route point, highlight **Current Position** and press ENTER. Highlight **Remove** and then press ENTER.
- Highlight the **Calculation Method** drop-down list and press ENTER. Then, highlight **Road** or **Direct** and press ENTER.
- Highlight **Navigate** and press ENTER to calculate the route. If the calculation is successful, the route is highlighted on the Map Page.

To View a Route

- From the Routes Page, use the arrow keypad to highlight the route you want to view and press ENTER.
- Highlight **View** and press ENTER. The route displays on the Map Page and the map is in pan mode.
- To stop displaying the map, press QUIT to return to the Route Details page. The View button has changed to Hide. Highlight **Hide** and press ENTER.


OR

From any default page (except the Satellite Page), press MENU, highlight **Hide Route**, and then press ENTER.

To Simulate a Route

You can preview a route on the map using the Simulate Navigation feature. The route is highlighted on the map and the device beeps at each applicable turn.

- From the Routes Page, use the arrow keypad to highlight the route that you want to simulate and press ENTER.
- Press MENU, highlight the **Simulate Navigation** option, and then press ENTER. If you have tracking enabled, the message, "Simulate Navigation will turn off Track Recording mode" displays. Highlight **OK** and press ENTER. The cursor goes into simulate mode and plays the route on the map.
- To end simulation, press MENU, highlight the **Stop Simulation** option, and press ENTER.

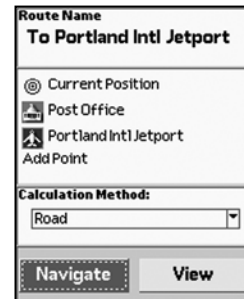

Road route with two points

Note: When you create a direct route from your current GPS location to a single point and navigate to it, the route is automatically deleted once you stop navigating.

To View Comment Details

When navigating, the View Comment Details option displays the comment for the waypoint or geocache to which you are navigating.

Note: If you view the comment details for another waypoint or geocache while navigating, View Comment Details displays the most recent comment details viewed.

1. From the Routes Page, press MENU.
2. Highlight **View Comment Details** and press ENTER.

To Change Route Options

When navigating, use Route Options to stop navigating, get back on track, or switch the route type. For more information about route options, see *To Edit the Route Settings* on page 60.

1. From the Routes Page, press MENU.
2. Use the arrow keypad to highlight **Route Options** and press ENTER.
3. Highlight **Stop Navigating, Back on Track,** or **Switch to Direct Route/Switch to Road Route** and press ENTER.

To Edit a Route

From the Routes Page, use the arrow keypad to highlight the route that you want to edit and press ENTER.

- To rename the route, highlight the **Route Name** field and press ENTER. Use the keyboard to enter the new name text. Then, highlight **OK** and press ENTER.
- To add a route point, highlight **Add Point** and press ENTER.
- To use the Find function to add the point, highlight **Use Find** and press ENTER (for more information, see *The Find Page* section that starts on page 37). After you find the point, highlight the result, press ENTER, and then highlight **Add** and press ENTER to add the search result as a point in the route.

OR

To select a route point that is on the map, highlight **Use Map** and press ENTER to pan to the location on the map that you want to use as a route point. Once you move the cursor to the location you want, press ENTER, and then press QUIT to return to the Routes Page.

- To change the calculation method, use the arrow keypad to highlight the **Calculation Method** drop-down list and press ENTER. Then, highlight **Road** or **Direct** and press ENTER.
- To immediately navigate against the edited route, highlight the **Navigate** button and press ENTER.

OR

If you do not want to navigate against the edited route, press QUIT.

To View Route Directions

Route Directions are available only when navigating a route. While navigating, press PAGE until the Directions Page appears. You can also view directions for an active route from the Routes Page. Use the arrow keypad to highlight **Directions** and press ENTER.

From the Directions Page, press MENU to use the Directions Menu to view comment details, change route options, or set the direction distance option.

- The View Comment Details option displays the comment for the waypoint or geocache to which you are navigating. For more information, see *To View Comment Details* on page 58.
- Route Options allow you to stop navigating, get back on track, or switch the route type. For more information, see *To Change Route Options* on page 58.
- Show Distance to Finish or Show Distance to turn indicates the direction distance option for the Directions Page. You are using the option that is not displayed. Use the arrow keypad to highlight the option to switch to and press ENTER.

To Reverse a Route

1. From the Routes Page, use the arrow keypad to highlight the route that you want to reverse.
2. Press ENTER and then press MENU.
3. Use the arrow keypad to highlight **Reverse Route** and press ENTER. The route is reversed.

To Delete a Route

1. From the Routes Page, use the arrow keypad to highlight the route that you want to delete.
2. Press ENTER and then press MENU.
3. Use the arrow keypad to highlight **Delete Route** and press ENTER. The route is deleted.



Route Directions (available when navigating)

To Delete All Routes

1. From the Routes Page, press MENU.
2. Use the arrow keypad to highlight the **Delete All Routes** option and press ENTER.
3. On the Manage Memory screen, the Delete All Waypoints check box is selected and Delete Now is highlighted. Press ENTER.
4. When you see the confirmation message, highlight Yes and press ENTER to delete all routes.

To Hide a Route

Once you view a route, you can hide it.

1. From any default page (except the Satellite Page), press MENU.
2. Use the arrow keypad to highlight the **Hide Route** option and press ENTER.

To Edit the Route Settings

1. From the Routes Page, press MENU.
2. Use the arrow keypad to highlight the **Edit Route Settings** option and press ENTER.
 - To change the calculation method, use the arrow keypad to highlight the **Calculation Method** drop-down list and press ENTER. Then, use the arrow keypad to select **Direct** or **Road** and press ENTER. Direct calculates the route using the shortest distance between two points. Road uses roads to calculate the route.
 - To change your back-on-track status, use the arrow keypad to highlight **Back on Track (Direct)** or **Back on Track (Road)** drop-down list and press ENTER. Then, use the arrow keypad to select **Automatic**, **Prompt**, or **Off** and press ENTER.

For Direct, choose Automatic to continuously recalculate from the current GPS location to the next stop in the route. Choose Prompt to alert you when you are off track; you can then choose to recalculate or ignore. When the route recalculates, the route highlight is cleared from the start to the current GPS location. The original route is not modified; you can select it again to restore it.

For Road, choose Automatic to recalculate from the threshold specified in the Back on Track Threshold option. Choose Prompt to alert you when you are off track; you can then choose to recalculate or ignore. When the route recalculates, the current GPS location is inserted as a stop in the existing route. The route highlight displays from the start to the current GPS



Route menu

location and then to the destination.

- To change your back-on-track threshold, use the arrow keypad to highlight the **Back on Track Threshold** drop-down list and then press ENTER. Then, use the arrow keypad to select the threshold distance and press ENTER.
- To change the compass navigation arrow setting for direct routes, use the arrow keypad to highlight the **Compass Navigation Arrow** drop-down list and press ENTER. Select **Direct to Next Waypoint** or **Back on Course** and press ENTER.
- To change the calculation speed for a direct route, use the arrow keypad to highlight the **Direct Calc Route Speed** field and press ENTER. Use the arrow keypads to highlight and change each digit and then press ENTER.
- To restore the route edit settings to their factory-set defaults, use the arrow keypad to highlight the **Restore Defaults** button and press ENTER.

***Tip:** Setting the back-on-track threshold to a large value prevents excessive prompts. Setting the back-on-track threshold to a small value provides a quicker notification when you are off course.*

***Tip:** Direct to Next Waypoint points the compass arrow in the direction of the next waypoint; this is the best option when you are trying to get to the next waypoint with the shortest distance. Back on Course points the compass arrow to the highlighted route. This is the best option when you are trying to stay on the route highlight.*

The Tracks Page

Using the Tracks Page



Tracks Page

Note: The active track displays on the Tracks Page in bold text. On the map, you can view the active track and one saved track at the same time.

To open the Tracks Page, press MENU, highlight **Tracks**, and press ENTER.

Note: If you have added the Tracks Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears.

Your Earthmate PN-40 is set by default to record GPS tracks. That means the device creates a track, or “breadcrumb trail,” of your travels until you turn recording off. The appearance of the breadcrumb trail is based on your GPS status.

- When you have a 3-D fix, your track displays as a green line.
- When you have a 2-D fix, your track displays as a yellow line.
- When the GPS cannot acquire a fix, no points are placed on the map. Points are again placed once a 2-D or 3-D fix is established. If a GPS connection was established and lost, a red line indicates the last GPS location.

The Tracks Page lets you save, clear, or follow the current track, or view/follow an existing track. You can save up to ten tracks.

To Turn GPS Track Recording On/Off

From the Tracks Page:

To turn GPS track recording on, highlight **On** and press ENTER.

OR

To turn GPS track recording off, highlight **Off** and press ENTER.

To Save the Active Track

Once you save the active track, a new track is created. To change track information, from the Tracks Page, use the arrow keypad to highlight **Save** and press ENTER.

- To rename the track (the default name is in the date/time format: DD-MON-YY, HHMMSS and ends with “A” for AM or “P” for PM), highlight the **Track** field and press ENTER. Use the keyboard to enter the track name text. Then, highlight **OK** and press ENTER.
- To change the track display color, highlight the **Color** field and press ENTER. Highlight a color and press ENTER.

- To add a comment to your track, highlight the **Comments** field and press ENTER. Use the keyboard to enter the comment text. Then, highlight **OK** and press ENTER.
- To view the track, highlight **View** button and press ENTER. **Note:** The View button toggles with the Hide button.
- To follow and create a direct route along the track, highlight **Follow** and press ENTER.
- To delete the track, highlight **Delete** and press ENTER.

To Follow a Track Back to Where it Started

1. From the Tracks Page, use the arrow keypad to highlight the track you want to create a route from and press ENTER.
2. Highlight **Follow** and press ENTER. The track is reversed and a route is created so you can follow your footsteps and return to where you started the track.

To Clear the Active Track

1. From the Tracks Page, use the arrow keypad to highlight **Clear** and press ENTER.
2. Press QUIT to return to the previous page.

To Delete a Saved Track

1. From the Tracks Page, use the arrow keypad to highlight the track to delete and press ENTER.
2. Highlight **Delete** and press ENTER.

To View a Saved Track


1. From the Tracks Page, use the arrow keypad to highlight the track to view and press ENTER. The Track Details Page displays. Track logs that display with red text are visible on the map.
2. Highlight **View** and press ENTER. The entire track displays on the map.
3. To stop viewing the track, return to the Track Details Page, highlight the active track, and press ENTER. Highlight **Hide** button and press ENTER.

To Customize the Logging Preferences

Use the following steps to designate if you want the device to log GPS points based on time or distance intervals. Logging based on a short time interval provides the most detailed results but also quickly adds many points. Logging based on distance takes much longer to fill the track, allowing you to record a great distance (10 feet is the shortest distance interval available).

Track Royal River Canoe Trip	
Color [Black Box]	Time/Date 04:11 PM 02-Feb-09
Distance 5.59 mi	Trip Time 00:01:04
Comments Pick up at Rte 9	
View	Follow Delete

Track Details

Tip: Select  to enter more than one line of text in a comment.

Tip: View a saved track when you want a reference from a previous trip but do not want to create a route.

Tip: Use a small interval to record a detailed track of a new trail. Use a large distance interval to record your location during a long trip.



Tracks menu

Tip: Select **Start Recording New Track** to save a detailed track of a specific path. Select the **Overwrite Points** option if you are interested in knowing only where you have traveled most recently.

1. From the Tracks Page, press MENU.
2. Highlight **Edit Track Settings** and press ENTER.
3. Highlight the **Record Points** by drop-down list and press ENTER.
4. Highlight **Time** or **Distance** and press ENTER.
5. Highlight the **Recording Interval** field and press ENTER.
6. Use the arrow keypad to increase/decrease the recording interval value. If you selected Time in step 4, the recording interval is expressed in seconds. If you selected Distance in step 4, the recording interval is expressed in feet.
7. Highlight the **When Track is Full** drop-down list and press ENTER.
8. Highlight **Overwrite Points**, **Stop Recording**, or **Start Recording New Track**. This option determines how the device reacts when the track reaches its maximum number of points. If you select the Overwrite Points option, the oldest points in the track are replaced with new points. If you select Stop Recording, the device stops recording points when it is full. If you select Start Recording New Track, the device saves the track and starts recording a new track.
9. Press QUIT to return to the Tracks Page.

To Enable or Disable the Reset Info Menu

The Reset Info menu allows you to synchronize your Trip Info with a track when you press Save or Clear on the Track Details Page. This feature is enabled by default.

1. From the Tracks Page, press MENU.
2. Highlight **Edit Track Settings** and press ENTER.
3. To enable the Reset Info menu if the check box is cleared, highlight the **Prompt to Reset Trip Info** check box and press ENTER.

OR

To disable the Reset Info menu if the check box is selected, highlight the **Prompt to Reset Trip Info** check box and press ENTER.

4. Press QUIT.

To Reset Info


When the Reset Info menu is enabled, you can reset trip values, speeds, elevations, and the device odometer.

1. On the **Reset Info** menu, use the arrow keypad to highlight the item you want to reset. Press ENTER to select the check box. Press ENTER again to clear the check box.
2. Highlight the **Reset Now** button and press ENTER.

To Delete All Saved Track Logs

You can use the Track menu to delete all of the track logs you have saved on your device.

1. From the Tracks Page, press MENU.
2. Highlight **Delete All Tracks** and press ENTER.
3. On the Manage Memory screen, the Delete All Waypoints check box is selected and Delete Now is highlighted. Press ENTER.
4. When you see the confirmation message, highlight Yes and press ENTER to delete all saved tracks.

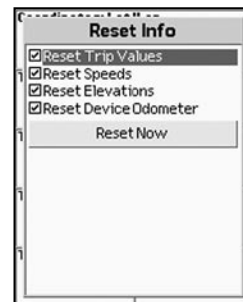

Reset Trip Info

The Sun/Moon Page

Using the Sun/Moon Page



Sun/Moon Page

To open the Sun/Moon Page, press MENU, highlight **Sun/Moon**, and then press ENTER.

Note: If you have added the Sun/Moon Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears.

Use the Sun/Moon Page to view the sunrise/sunset and moonrise/moonset information and the moon phase information for your current GPS location. The current date and time displays at the top of the screen.

To Set the Time

Note: Setting the time in the Sun/Moon Page affects only the Sun/Moon Page values, not the device's time information.

1. From the Sun/Moon Page, use the arrow keypad to highlight the **Time** field and press ENTER.
2. Highlight the part of the field you want to change. Press the arrow keypad up or down to change it.
3. When finished changing the time, press ENTER.

To Set the Date

Note: Setting the date in the Sun/Moon Page affects only the Sun/Moon values, not the device's date information.

1. From the Sun/Moon Page, use the arrow keypad to highlight the **Date** field and press ENTER.
2. Highlight the part of the field you want to change. Press the arrow keypad up or down to change it.
3. When finished changing the date, press ENTER.

To View the Sun/Moon Graphics

The Sun/Moon graphics that display in the center of the Sun/Moon Page reflect the current sun/moon conditions based on the time and date settings.

The graphic on the left shows the current position of the sun/moon in relation to a compass. The graphic on the right shows where the sun/moon is currently as it moves overhead from east to west.

To View the Sun and Moon Rise/Set Information

The Sun/Moon rise and set information is found underneath the Sun/Moon graphics. The

Tip: You can pan the map to another geographic location and then view the Sun/Moon Page to see the information for that area.

information displays the time that both the sun and moon will rise and set based on the current time and date settings. The Sun information is on the left and the moon information is on the right. The rise information displays on the top and the set information displays on the bottom. If the sun or moon does not rise or set on a specific date, dashes (- -) display in the applicable information fields.

To View the Moon Phase Information

The moon phase information is based on the current time and date settings. It displays the name of the current moon phase as well as a graphic representation of it.


To Reset the Sun/Moon Page's Time/Date

If you have modified the time or date in the Sun/Moon Page, you can reset it to the device's time and date information.

1. From the Sun/Moon Page, press MENU.
2. Use the arrow keypad to Highlight **Reset Time and Date** and press ENTER. The Time and Date fields update to the device time and date.

The Tide Page

Using the Tide Page

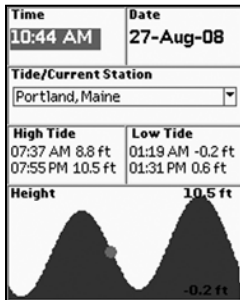

Tide Page

Tip: You can pan the map to another geographic location and then view the Tide Page to see the information for that area.

To open the Tide Page, press MENU, highlight **Tide** and press ENTER.

Note: If you have added the Tide Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears.

Use the Tide Page to view high and low tide information based on a specific time, date, and tide station.

To Get Tide Information for a Particular Time and/or Date

Setting the time or date in the Tide Page affects only the Tide Page's time or date, not the device's time or date. You can change the time, the date, and the location.

- To get tide information for a specific time, use the arrow keypad to highlight the **Time** field and press ENTER. Highlight the part of the field you want to change. Press the arrow keypad up or down to change it. When finished changing the time, press ENTER.
- To get tide information for a particular date, use the arrow keypad to highlight the **Date** field and press ENTER. Highlight the part of the field you want to change. Press the arrow keypad up or down to change it. When finished changing the date, press ENTER.
- To change the Tide station, highlight the **Tide Station** drop-down list and press ENTER. The list of available tide stations displays. Highlight the station and press ENTER.

Once you select a tide station, the High Tide and Low Tide or Max Ebb and Max Flood fields display the tide information for the selected date and time. The graph at the bottom of the screen shows the high and low tide information for the entire day (midnight to midnight). The red dot in the tide graph indicates the time as selected in the Tide Page.

To Reset the Tide Page's Time and Date

If you modified the time or date in the Tide Page, you can reset it to the device's time/date information.

1. From the Tide Page, press MENU.
2. Highlight **Reset Time and Date** and press ENTER. The Time and Date fields update to the device's time and date.

The Hunt/Fish Page

Using the Hunt/Fish Page

To open the Hunt/Fish Page, press MENU, highlight **Hunt/Fish**, and press ENTER.

Note: If you have added the Hunt/Fish Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears.

Use the Hunt/Fish page to view a prediction of the type of day it will be for hunting or fishing, the best times to hunt or fish, and good times to hunt or fish for your current GPS location.

To Set the Date

Setting the date in the Hunt/Fish Page affects only the Hunt/Fish Page's date, not the device's date.

1. From the Hunt/Fish Page, use the arrow keypad to highlight the **Date** field and press ENTER.
2. Highlight the part of the field you want to change. Press the arrow keypad up or down to change it.
3. When finished changing the date, press ENTER.

To Reset the Hunt/Fish Page's Date

If you modified the date in the Hunt/Fish Page, you can reset it to the device's date.

1. From the Hunt/Fish Page, press MENU.
2. Use the arrow keypad to highlight **Reset Date** and press ENTER. The Date field updates to the device's time and date.

Time	Date
09:26 AM	22-Aug-08
Coordinates: Lat/Lon	
N 43°48.4805'	
W 70° 9.8078'	
Prediction	
Average Day	
Best Times	
02:59 AM - 04:59 AM	
03:15 PM - 05:15 PM	
Good Times	
09:37 AM - 10:37 AM	
10:04 PM - 11:04 PM	

The Hunt/Fish Page

Tip: You can pan the map to another geographic location and then view the Hunt/Fish Page to see the information for that area.

The Device Setup Page



Device Setup menu

To open the Device Setup Page, press MENU, highlight **Device Setup**, and press ENTER.

Note: If you have added the Device Setup Page to the PAGE button sequence, it is no longer available on menus. Press the PAGE button until the page appears.

Use the Device Setup Page options to modify the default settings on the Earthmate PN-40, such as the battery type, backlight settings, and more. You can also view and manage internal and SD card memory use and restore the device's default system settings. Use the arrow keypad to highlight options.

Modifying the Device Preferences

To Modify the System Settings

To update GPS settings, WAAS status, battery type, and/or USB power setting, from the Device Setup Page, highlight the **System** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.

- To update the GPS settings, highlight the **GPS Setting** drop-down list and press ENTER. Highlight **Normal**, **Power Saving**, **Disable GPS**, or **Demo Mode** and press ENTER.
- To update the WAAS status, highlight the **WAAS** drop-down list and press ENTER. Select the **Enabled** option to enable WAAS use or select the **Disabled** option to disable WAAS use. Then, press ENTER.

Note: In most cases, a WAAS signal provides greater accuracy than a non-WAAS signal.

- To update the battery type, highlight the **Battery Type** drop-down list and press ENTER. Select the battery type you are using and then press ENTER.
- To update the USB power setting, highlight the **USB Power** drop-down list and press ENTER. Select the **Enabled** option to enable power from the USB port or select the **Disabled** option to disable USB power.
- To view internal and SD card memory use, highlight **Memory Use** and press ENTER. The Memory Use page displays the used memory and the total capacity on the device. To manage memory use by deleting data, highlight **Manage Memory** and press ENTER. Select the check box next to each data type you want to delete, highlight **Delete Now**, and press ENTER.



System menu options

- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Display Settings

To update the device's color scheme, backlight intensity, and/or backlight timer, from the Device Setup Page, highlight the **Display** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.

- To modify the color scheme, highlight the **Color Scheme** drop-down list and press ENTER. Highlight the color scheme you want and press ENTER.
 - Spring (green)
 - Summer (yellow)
 - Autumn (orange)
 - Winter (blue)
 - Midnight (high contrast—black/gray/dark blue; helpful for nighttime use)
- To modify the backlight intensity, highlight the **Backlight Intensity** slider and press the arrow keypad to the right to increase the intensity level or to the left to decrease the intensity.
- To automatically switch to the Midnight (high contrast) scheme at sunset, select the **Use Midnight at sunset** check box.
- To modify the backlight timer, highlight the **Backlight Timer** drop-down list and press ENTER. Highlight the time interval you want and press ENTER.


Note: Decreasing the Backlight Timer helps conserve battery life.
- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Connect to Computer Settings

The USB settings you choose on the device depend on the type of cable you use to connect the device to your computer, your computer's operating system, and if you are trying to access information on a removable media (SD) card. Press QUIT at any time to return to the Device Setup Page.

From the Device Setup Page, highlight the **Connect to Computer** option and press ENTER.

- To hide the Connect to Computer menu when you connect your device to your computer, highlight **Show Connect to Computer** and press ENTER to clear the check box. To show the Connect to Computer menu (if it is hidden), highlight **Show Connect to Computer** and press

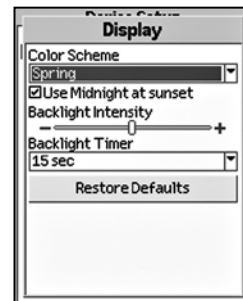

Display menu options



Connect to Computer menu options

ENTER to select the check box. For more information about the Connect to Computer menu, see *Connecting to Your Computer* on page 6.

- To connect the computer to your own device using a USB cable, highlight the **USB Setting** drop-down list and press ENTER. Select one of the following options:
 - **Data Exchange**—Select this option for GPS use and to transfer waypoints, geocaches, tracks, and routes to or from the device. You can transfer map packages to the device, but transfer will be slow.
 - **Transfer to SD Card**—Select this option to transfer map packages to an SD card in the device. Maps are transferred to the “maps” folder on the SD card. You cannot use this method to transfer waypoints, tracks, and routes. You can also use this method to transfer a map from the Earthmate PN-40 to your mapping software.
 - **Transfer to Internal**—Select this option to transfer map packages to the device’s internal memory. The device is used as a USB storage drive. You cannot use this method to transfer waypoints, tracks, and routes.

Note: Mac and Linux users should always select Transfer to SD Card or Transfer to Internal.
 - **Firmware Transfer**—Select this option to transfer a firmware update to an SD card in your device. The update is transferred to the “update” folder on the SD card. You cannot use this method to transfer map packages, waypoints, tracks or routes.



Compass and Altimeter menu options

After you select the option, follow any on-screen instructions on the Earthmate PN-40.

- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Compass and Altimeter Settings

To modify the compass and altimeter settings, from the Device Setup Page, highlight the **Compass & Altimeter** option and press ENTER. Press QUIT at any time to return to the Device Setup Page. All of the options on this page are on by default.

- To disable the electronic compass, highlight **Enable Electronic Compass** and press ENTER to clear the check box. To enable it (check box is cleared), press ENTER to select the check box.
- To disable the barometric altimeter, highlight **Barometric Altimeter** and press ENTER to clear the check box. To enable it (check box is cleared), press ENTER to select the check box.
- To disable auto calibration of the barometric altimeter, highlight **Auto Calibrate Altimeter** and

Note: Auto calibration compares the GPS elevation to the device’s barometric altimeter elevation and improves its accuracy over time. When calibrating, “Calibrating” displays in the bottom right corner of the Satellites Page and the GPS: Altimeter info field displays a red exclamation point.

press ENTER to clear the check box. To enable it (check box is cleared), press ENTER to select the check box. For more information about calibration, see *Calibrating Sensors* on page 14.

Note: Manual calibration is more accurate than auto calibration.

- To calibrate the compass or altimeter, highlight **Calibrate** and press ENTER. For more information about calibration, see *Calibrating Sensors* on page 14.
- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Sound Settings

To modify the device's button press sound, message sound, power sound, turn alert sound, and/or the volume of all sounds, from the Device Setup Page, highlight the **Sound** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.


- To modify the button press sound, highlight the **Button Press** drop-down list and press ENTER.
Highlight the sound type you want and press ENTER.
- To modify the message sound, highlight the **Message** drop-down list and press ENTER. Then, highlight the sound type you want and press ENTER.
- To modify the power sound, highlight the **Power** drop-down list and press ENTER. Then, highlight the sound type you want and press ENTER.
- To modify the turn alert sound, highlight the **Turn Alert** drop-down list and press ENTER. Then, highlight the sound type you want and press ENTER.
- To modify the volume of all sounds, highlight the **Volume** slider control and press the arrow keypad to the right to increase the volume (or to the left to decrease the volume).
- To mute the sound, highlight the **Mute** field and press ENTER. Note: This does not mute the warning sound when power is critically low or the altimeter calibration step sounds. To enable sound again when the check box is selected, highlight the **Mute** field and press ENTER to clear the check box.
- To restore the default page settings, highlight **Restore Defaults** and press ENTER.



Sound menu options

To Modify the Time Settings

To modify the device's time format, time zone, and/or Daylight Saving Time preferences, from the

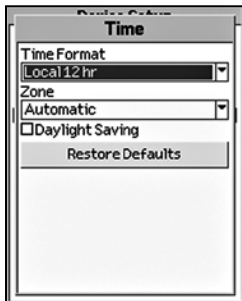

Time menu options

Device Setup Page, highlight the **Time** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.

- To modify the time format, highlight the **Time Format** drop-down list and press ENTER. Then, highlight **Local 12 Hour** or **Local 24 Hour** and press ENTER.
- To modify the time zone, highlight the **Zone** drop-down list and press ENTER. Then, highlight the time zone you want and press ENTER.

Note: Select the Automatic option to allow the device to update the time zone based on your current GPS location.

- To enable the Daylight Saving Time option, highlight the **Daylight Saving** field and press ENTER to select the check box.
- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Units Settings

From the Device Setup Page, highlight the **Units** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.



Units menu options

- To modify the primary coordinates, highlight the **Coordinates: Primary** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the secondary coordinates, highlight the **Coordinates: Secondary** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the primary datum, highlight the **Datum: Primary** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the secondary datum, highlight the **Datum: Secondary** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the measures, highlight the **Measures** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the pressure, highlight the **Pressure** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To modify the bearing, highlight the **Bearing** drop-down list and press ENTER. Then, highlight the format and press ENTER.
- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

To Modify the Page Order Settings

To change the page order, add a page to the page button sequence, or hide a page, from the Device Setup Page, highlight the **Page Order** option and press ENTER. Press QUIT at any time to return to the Device Setup Page.

- To change the page order, highlight the PAGE you want to move up or down in the list. Use the arrow keypad to highlight the up button to move a page up or the down button to move a page down. Then, press ENTER. Repeat this step for each page you want to reorder.
- To add a page to the PAGE button sequence, highlight the Menu Option you want to add as a page. Then, press ENTER to select the check box next to the menu option. A selected check box indicates the option appears in the page sequence. Repeat this step for each standard menu option that you want to add as a page. When you add a page to the PAGE button sequence, it is no longer available on menus.
- To hide a page, highlight the page you do not want to view with the PAGE button (active pages have a selected check box) and press ENTER to clear the check box. Repeat this step for each page you want to hide.

Note: You cannot hide the Map Page from the page button sequence.

- To restore the default page settings, highlight **Restore Defaults** and press ENTER.

Owner Information

The Owner Information page allows you to enter text to identify your device.

1. In the text area, press ENTER to display the keyboard.
2. Use the arrow keypad and the keyboard to enter up to 255 characters on six lines. Then, highlight **OK** and press ENTER.
3. To display the information when you turn on the device, highlight the **Display at Startup** field and press ENTER.

OR

If the check box is selected and you do not want to show the information, highlight the field and press ENTER to clear the check box.

4. Press QUIT to return to the Device Setup Page.



Page Order menu options

Note: Pages in the PAGE button sequence are not displayed in menus.

About this Device

The About This Device page displays the serial, build, and version numbers for your Earthmate PN-40. This page contains the serial number you need when downloading maps for the device. You can also view license information.

1. From the Device Setup Page, highlight the **About This Device** option and press ENTER.
2. To view the license, press ENTER.
3. Press QUIT to return to the Device Setup Page.

Restore Setup Defaults

If you want to restore all of the Device Setup preferences without going through each Device Setup option and selecting the Restore Setup Defaults option, use the steps below.

To Restore the Device Setup Defaults

1. From the Device Setup Page, highlight the **Restore Setup Defaults** option and press ENTER.
2. Press QUIT to return to the Device Setup Page.

Restore Factory Defaults

The Restore Factory Defaults option in the Device Setup page restores all of the settings on the Earthmate PN-40 to their “out-of-the-box” status and also deletes all tracks, routes, waypoints, etc. Maps you have added to the device will not be deleted.

Appendix A: Page Function Table

This table provides an overview of what you can view/do on each page, as well as each page's menu functions:

With this Page...	You Can...	And Use the Page's MENU to...
Satellite	View the: <ul style="list-style-type: none"> • GPS Status • WAAS Status • GPS accuracy • Satellite constellation • Satellite signal graph • Battery indicator 	<ul style="list-style-type: none"> • Disable/enable GPS • Calibrate the compass and altimeter • Set the current location
Map	View: <ul style="list-style-type: none"> • Various types of map data • The scale for the current map • The North arrow (only available when Heading Up is selected as the map orientation and the map is not Course or North Up) • Your current GPS status • Your direction of travel 	<ul style="list-style-type: none"> • Turn imagery on or off • Show/hide/arrange/change/restore information fields • Measure the distance/area of a user-drawn line/polygon • Show/hide map packages • Layer and manage map data • Change the map orientation/style • Show/hide hybrid maps • Manage map points • Change the map scale type • If navigating: view comment details, stop navigating, get back on track, or switch route type

With this Page...	You Can...	And Use the Page's MENU to...
Compass	View heading/bearing information	<ul style="list-style-type: none"> • Calibrate the compass and altimeter • Change the Direct Route Arrow • Arrange/change/restore information fields • If navigating: view comment details, stop navigating, get back on track, or switch route type
Trip Info	View user-selected information	<ul style="list-style-type: none"> • Change/restore information fields • Show large text in the information fields (displays three large fields) • Reset trip values • If navigating: view comment details, stop navigating, get back on track, or switch route type
Find Button	<ul style="list-style-type: none"> • Find a waypoint • Find a geocache • Find a POI • Find a natural feature • Find an address • Find a coordinate • Find a street/trail • Find a city • Find draw layers • Find GIS layers (XMap) • View recent finds 	<ul style="list-style-type: none"> • Set search options to Find By Name or Find Near Map Center • For Find by Name method, narrow search with Contains or Begins With options
Waypoints or Waypoint Details	<ul style="list-style-type: none"> • View a list of waypoints • View a waypoint on the map • Edit a waypoint • Navigate to a waypoint 	<ul style="list-style-type: none"> • Set sort options to By Name (alpha) or By Distance • Delete waypoints • Move waypoint to GPS location

With this Page...	You Can...	And Use the Page's MENU to...
Waypoints, cont.	<ul style="list-style-type: none"> • Center a waypoint on the map • Delete a waypoint 	<ul style="list-style-type: none"> • Average a waypoint • View comment details
Geocaches or Geocache Details	<ul style="list-style-type: none"> • View a list of geocaches • View a geocache on the map • Edit a geocache • Route to a geocache • Delete a geocache 	<ul style="list-style-type: none"> • Set sort options to By Name (alpha) or By Distance • Switch to show logged/not logged geocaches • Log geocache find • Upload field notes • Delete geocaches • Move geocache to GPS location • Average geocache • View comment details
Routes or Route Details	<ul style="list-style-type: none"> • Create a route • Rename a route • Edit a route • View route directions 	<ul style="list-style-type: none"> • Reverse a route • Delete a route • Delete all routes on the device • Edit the route settings • View a route • Simulate a route • If navigating: view comment details, stop navigating, get back on track, or switch route type • For directions, show Distance to Turn/ Distance to Finish
Tracks	<ul style="list-style-type: none"> • Turn tracking off • Save a track • Return to the track start 	<ul style="list-style-type: none"> • Edit track settings • Delete all tracks

With this Page...	You Can...	And Use the Page's MENU to...
Tracks, cont.	<ul style="list-style-type: none"> • Clear the current track • Delete an existing track • View an existing track • Navigate to a track start 	
Sun/Moon	<ul style="list-style-type: none"> • See the device time • See the device date • View sun/moon rise/set information • View moon phase information 	Reset the Sun/Moon time/date
Tide	View tide info bar for particular time/date	Reset the Tide time/date
Hunt/Fish	View optimum predicted times for hunting and fishing	Reset the date
Device Setup	<u>You must use the MENU functions to modify the device settings</u>	<ul style="list-style-type: none"> • Turn the GPS on/off • Turn WAAS status on/off • Select a battery type • Select a color scheme • Select the color contrast • Select the backlight intensity • Select the backlight timer • Change USB settings • Change the electronic compass setting • Change the barometric altimeter setting • Change the Auto Calibrate Altimeter setting

With this Page...	You Can...	And Use the Page's MENU to...
Device Setup, cont.		<ul style="list-style-type: none"> • Calibrate the compass and altimeter • Select sounds • Change volume/mute • Modify time format/time zone • Enable/disable Daylight Saving Time • Modify Units <ul style="list-style-type: none"> – Primary Coordinates – Secondary Coordinates – Datum – Measures – Pressure – Bearing • Modify page order • Enter owner information • View serial number/firmware version • View license information • Restore setup and factory defaults

Appendix B: Specifications

Physical Specifications

Case: IPX-7 waterproof, impact resistant

Size: 5.25" x 2.43" x 1.5"

Weight: 5.35 oz.

Technical Specifications

Hardware

- Super high-sensitivity 32-channel Cartesio chipset by STMicroelectronics
- Dual-core processor
- WAAS-enabled; position accuracy < 3 meters
- 3-axis electronic compass with accelerometer
- Barometric altimeter
- Cold start: < 1 minute; warm start: < 45 seconds; hot start: 5-6 seconds
- Maximum Velocity: 1000 knots
- Advanced high-sensitivity tracking algorithms
- Weak signal tracking down to -159dBm
- Proprietary Kalman filter for enhanced position accuracy
- Superior noise rejection for high EMI environments
- Operating temperature range -20 °C to +75 °C
- Storage temperature range -45 °C to +100 °C
- Built-in antenna
- Sharp high-resolution 2.2" Transflective TFT color display (220 x 176 pixels)
- Audio: Buttons, directions, and alerts.

Map and User Data

- Detailed U.S. base map data with secondary and connector roads along with major highways and roads for the entire world
- Holds up to 10 tracks (10,000 points per track), 1,000 user waypoints, and 50 routes

Power and Memory

- Power (without SD card): Full power: 600mW typical (690mW with full backlight); Power save: < 350mW
- Fast USB 2.0 data transfer
- 500 MB available internal flash memory (SE model: 7 GB available internal flash memory)
- Supports SD and SDHC memory cards; up to 32 GB
- Uses 2 AA batteries

FCC Certification

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended. Dispose of used batteries according to the manufacturer's instructions.

Warning

Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage, and so on.

Limited Warranty

DeLorme warrants that your *Earthmate PN-40* will be free from defects in materials and workmanship for 1 year from the date of purchase. If your *Earthmate PN-40* fails in normal use, DeLorme will, at its sole option, either repair or replace the unit. DeLorme reserves the right to either repair or replace the unit with a new or refurbished unit at its sole discretion.

Such repairs or replacements will be made at no charge for labor or materials; however, the customer will be responsible for any shipping charges incurred to send the device to DeLorme. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. This warranty does not cover failures due to abuse, misuse, accidents, or unauthorized disassembly or modification. Any repairs not performed by DeLorme will void this warranty.

DELORME DISCLAIMS ANY LIABILITY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUES OR PROFITS, EVEN IF DELORME HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITED WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, SHALL LAST FOR 1 YEAR.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of relief such as incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty applies to the original purchaser of the product ONLY.

REMINDER: Be sure to retain the sales receipt proving the date of your original purchase. This will be needed if warranty service is ever required. DeLorme reserves the right to refuse warranty if a receipt is not provided or if the receipt is incomplete/illegible.

Service Plan

Before a product can be returned, you must contact DeLorme Support at 207-846-8900 to determine if a return is necessary and request a Return Material Authorization (RMA) tracking number.

The following information must be provided to obtain warranty service:

- A copy of the sales receipt from the original retailer
- The serial number of the Earthmate PN-40
- The Return Material Authorization (RMA) tracking number that you received when you called DeLorme Support
- Your return shipping address
- Your daytime telephone number

If you have contacted DeLorme Support and have been instructed to send the device in for warranty service, send the unit to:

DeLorme Earthmate PN-40
Service Department
2 DeLorme Drive
Yarmouth, ME 04096 USA

For the latest warranty and repair information, visit www.delorme.com/gpsrepair.

Copyright Information

Fonts used are derived from the DejaVu fonts which are derived from Bitstream Vera, Copyright © 2003 by Bitstream, Inc. All Rights Reserved.

Geocaching icons (Copyright © Groundspeak Inc.) used with permission.

DeLorme Contact Information

Technical Support

Visit www.delorme.com/support to access the DeLorme Technical Support Knowledge Base, get answers to frequently asked questions, or for additional support information. If you cannot find an answer to your problem on the site, please call 207-846-8900 to speak to a Technical Support representative. Note: DeLorme Technical Support does not provide product training.

















































Customer Service

For general questions about returns, order status, or problems with shipments, phone 800-511-2459 (Monday thru Friday) or e-mail us at sales@delorme.com.




















































Direct Sales

To place additional orders, phone 800-561-5105.










Waypoint Symbols



 American Flag	 Birch Tree	 Danger
 Anchor	 Bird Tracks	 Deciduous Tree
 Animal Tracks	 Bird	 Deer Tracks
 Arrow, Down-left	 Boat Launch	 Deer
 Arrow, Down-right	 Bridge	 Dining
 Arrow, Down	 Building	 Diver Down
 Arrow, Left	 Buoy	 Dog Sledding
 Arrow, Right	 Camera	 Downhill Skiing
 Arrow, Up-left	 Camper	 Drinking Water
 Arrow, Up-right	 Canoeing	 Duck
 Arrow, Up	 Car	 Evergreen Tree
 Ballpark	 Cave	 Exclamation
 Beach	 Cemetery	 Exit
 Bear	 Church	 Final Location
 Bicycling	 Cross-country Skiing	 Fire Hydrant
 Binoculars	 Dam	 Fire






Waypoint Symbols

	First Aid		Kayaking		Public Airport
	Fish		Lighthouse		Question to Answer
	Fishing Pole		Lodging		Radio Tower
	Flower Garden		Military Airport		Railroad Crossing
	Four-wheel ATV		Military Base		Reference Point
	Gas Station		Mining		Restroom
	Glider Area		Money		Sailboat
	Golf Course		Moose		School Bus
	Health Facility		Motor Home		School
	Heliport		Mountain		Shelter
	Hiking		Parking		Shipwreck
	House		Parking Area		Shooting
	Ice Fishing Trap Set		Picnic Table		Shower
	Ice Fishing Trap Up		Police		Snowmobile
	Ice Skating		Post Office		Stop
	Information		Powerboat		Swimming
	Jeep		Private Airport		Telephone

Waypoint Symbols





















 


-  Tent
-  Toll Booth
-  Tow Truck
-  Traffic Light
-  Trailhead
-  Truck
-  Tunnel
-  Waterskiing
-  Flag
(available in red, dark red, yellow, dark yellow, green, dark green, blue, dark blue, turquoise, dark turquoise, gray, and dark gray)

-  Push Pin
(available in red, dark red, yellow, dark yellow, green, dark green, blue, dark blue, turquoise, dark turquoise, gray, and dark gray)
-  Dot
(available in red, dark red, yellow, dark yellow, green, dark green, blue, dark blue, turquoise, dark turquoise, gray, and dark gray)

-  Small Dot
(available in red, dark red, yellow, dark yellow, green, dark green, blue, dark blue, turquoise, dark turquoise, gray, and dark gray)
-  Green Star
-  Red X
-  Turquoise Circle
-  Yellow Square

Waypoint Symbols

Geocache Symbols

 Cache In Trash Out Event	 Letterbox Hybrid	 Traditional Cache
 Disabled	 Mega-Event Cache	 Unknown Cache
 Earth Cache	 Multi-Cache	 Virtual Cache
 Enabled	 My Cache	 Waymark
 Event Cache	 Needs Maintenance*	 Webcam Cache
 Found*	 NGS Benchmark	 Whereigo® Cache
 Geocache	 Not Found*	 Write Note*
 Geocache Found	 Stages of a Multi-Cache	

Notes:

- Geocaches with these symbols appear on the Logged Geocaches page.
- For all waypoints and geocaches, when an imported symbol is unavailable on the device, the red dot is used.

Glossary

Back on Course—The direction of travel needed to return to the course.

Base Map—A low-detail map that comes pre-loaded on the Earthmate PN-40.

Battery Life—The percentage of battery life that is left on the device.

Bearing—The direction of travel from the current location to the destination.

Coordinates—The current GPS location, cursor position, or map center.

Course—The direction of travel from the starting location to the destination.

Device Odometer—The total distance traveled in all trips.

Differential GPS (DGPS)—A technique to improve GPS accuracy that uses pseudo-range errors recorded at a known location to improve the measurements made by other GPS receivers within the same general geographic area. For more information, see WAAS.

Distance to Finish—The distance from the current location to the route finish.

Distance to Next Stop—The distance from the current location to the next stop in the route.

Distance to Next Turn—The distance from the current location to the next turn in the route.

Elevation—The height above or below sea level. GPS elevation is based on the current GPS location. Altimeter elevation is based on the device's barometric altimeter.

Elevation (Maximum)—The maximum elevation achieved.

Elevation (Minimum)—The minimum elevation achieved.

ETA at Finish—The estimated time of arrival at the route finish.

ETA at Next Turn—The estimated time of arrival at the next turn.

ETA at Next Stop—The estimated time of arrival at the next stop.

Geocaching—Geocaching is an outdoor treasure-hunting game that uses a GPS device to hide and seek containers called geocaches.

GPS—See What is GPS on page 7.

GPS Accuracy—The calculated accuracy of the GPS.

GPS Status—The current status of your GPS device (No Fix, 2-D, 3-D, etc.).

Heading—The current direction of travel.

Latitude—Position north or south of the equator in degrees; degrees, minutes; or degrees, minutes, seconds.

Longitude—Position east or west of the prime meridian in degrees; degrees, minutes; or degrees, minutes, seconds.

Mark—The action of placing a waypoint on the map.

Orientation—The alignment of a map relative to the points of the compass.

Pressure—The ambient pressure is the surrounding barometric pressure based on the altimeter.

Scale—The relationship between the extent of features in the real world and the size at which they are portrayed on the map. On the Earthmate PN-40, you can choose Bar, Zoom, or Ratio.

Speed—The current rate of travel for the device.

Speed (Average)—The average speed of the device including stop time.

Speed (Maximum)—The maximum speed achieved.

Speed (Moving Average)—The average speed of the device excluding stop time.

Time to Finish—The calculated time to the route finish based on the road classifications and default speed settings.

Time to Moonrise/set—The time remaining until the moon rises and sets.

Time to Next Stop—The estimated time to the next stop in the route based on the road classifications and speed settings.

Time to Next Turn—The estimated time to the next turn in the route based on road classifications and speed settings.

Time to Sunrise/set—The time remaining until the sun rises and sets.

Trip Odometer—The total distance the GPS device has been moving.

Trip Time Moving—The total time the GPS device has been moving.

Trip Time Stopped—The total time the GPS device has been tracking but not moving.

Trip Time Total—The total time the GPS device has been tracking, both moving and stopped.

Velocity Made Good—The component of the current velocity (speed) that is in the direction of the destination.

Vertical Speed—The current rate of vertical travel for the device.

Waypoints—Marked positions with specific coordinates. Geocache waypoints are a special type of waypoint used for geocaching.

Wide Area Augmentation System (WAAS)—A program developed by the Federal Aviation Administration to enhance the accuracy of GPS receivers, usually to within three meters of actual position, by providing a modified GPS signal. After calculating the error factor at ground control stations throughout the U.S., the corrected signal is transmitted to two geostationary satellites that in turn transmit the GPS signal back to earth. For more information, see Differential GPS (DGPS).

Index

A

About this Device.....	76
Arrow Keypad.....	4
Altimeter	
Auto Calibrate	14, 72
Calibrating	15
Averaging a waypoint.....	76

B

Back on track.....	60
Backlight.....	4, 71
Barometric Altimeter	
Auto Calibrate	14, 72
Calibrating	15
Base map	6
Basic functions.....	10
Batteries	
Charging.....	9, 11, 14
Compatible Types	2
Improving battery life.....	9
Indicator	13-14
Installing.....	2
Updating battery type.....	70
Begins With.....	37

C

Calibrate	
Altimeter	14, 73
Compass	15, 31, 73
Charging the device	11, 13-14
Compass	
Calibrating.....	15, 31, 73
Compass Page.....	31

Connect to Computer

Device Setup.....	71-72
When connecting.....	6-7
Contacting DeLorme.....	86
Contains	37
Creating a route.....	56

D

Data Detail.....	25-26
Data Layering	24-25
Data Management	25-26
Device Setup Page.....	70
Disabling GPS	14, 70

E

Editing

Route settings.....	60
Routes	58
Track settings.....	63-64
Waypoints	47

Enter button	4-5
Exchange data	6-7

F

Find button	4, 37
Find By Name	37
Find Near Map Center	37
Find Page	37

Finding

Addresses	40-41
Cities	42-43
Coordinates	41
Draw Layers	42
Geocaches	38
GIS Layers	43
Natural features	39-40
Points of interest	39
Search results	44
Streets/trails	41-42
Waypoints	37-38

Frequently asked questions	8-9
----------------------------------	-----

G

Geocaches Page	51
Centering the map on	51-52
Creating a route to	52
Deleting	55
Editing	52

Field Notes	53-54
Logging	53
Moving	55
Send to GPS	50
View details	52
View comment details	53
View list	51

Glossary	91
----------------	----

GPS

Disabling	14, 70
Modifying GPS Settings	70
Position accuracy	8, 13, 82
Signal	12
Status	12-13
What is GPS	7

H

Hunt/Fish Page	69
----------------------	----

I

In/Out button	3
Information Fields	
Arranging	17
Changing	18
Descriptions	18-23
Restoring	22-23
Showing/Hiding	17

K	
Keyboard	10-11
M	
Map cursor	4, 10
Map Data.....	16, 25
Map error.....	26
Map Page.....	16
Map Setup.....	24-30
Mark button.....	4
Marking a waypoint.....	4, 45
Measuring distance/area.....	23-24
Menu button	4
Modifying settings	
Compass altimeter.....	72-73
Computer connection	71-72
Display.....	71
GPS	70
Page order.....	75
Sound.....	73
System.....	70
Time	73-74
Units.....	74
N	
Navigating	10

O	
Orientation	26
P	
Page button.....	3
Page order.....	75
Panning the map	4, 10
POI detail.....	27
Power button.....	2, 5
Q	
Quit button	5
R	
Resetting the device	5
Restoring	
Demo Mode.....	2
Factory defaults	76
Information Fields	22-23
Map Setup information	25
Route settings.....	61
Setup defaults	76
Trip values	35
Route directions	59
Routes Page.....	56
Routes	
Creating.....	56
Deleting.....	59-60
Editing	60-61

Reversing	59
Simulating	57
Viewing	57

S

Satellites Page.....	12
SD card.....	7, 70, 72
Sensors	
Calibrating Altimeter	15
Calibrating Compass.....	15, 31, 73
Enabling/Disabling	72
Serial number	76
Service Plan	85
Set Current Location	3
Show small/large text	35
Simulating a route	57
Small waypoint symbols	28
Sounds	73
Specifications.....	82
Storing data.....	11
Sun/Moon	
Moon phase information.....	67
Resetting the time/date.....	67
Rise/set information.....	66-67
Setting the time/date	66
Sun/moon graphics.....	66
Sun/Moon Page	66
Symbols	87

T

Tide Page	68
Time settings	73-74

Tracks

Clearing	63
Deleting.....	63, 65
Following.....	63
Recording.....	62
Saving.....	62-63
Setting preferences	63-64
Viewing	63
Tracks Page	62
Transferring maps to the device	7
Trip Info Page	34

U

USB Setting.....	7, 71-72
------------------	----------

V

View

Maps	25-26
Routes.....	57
Route directions.....	59
Sun/Moon information.....	66-67
Tide information	68
Tracks	63
Volume	73

W

WAAS.....	12-13, 82
-----------	-----------

Warranty.....	84
Waypoints	
Averaging	46-47
Centering the map on	47
Creating a route to	48
Deleting.....	49
Editing	47-48
Marking	46-47
Moving	49
View list.....	45
Waypoints Page	45
Z	
Zooming the map in/out.....	3

Batteries

The Earthmate® PN-40 can be powered by two AA batteries (NiMH, alkaline, or lithium), or a DeLorme-supplied Li-Ion rechargeable battery. You'll find Earthmate PN-Series accessories at www.delorme.com.

Rechargeable Lithium-Ion Battery Pack Caution

Use only an Earthmate PN-40 Battery Type. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



We Bring Technology Down to Earth™

Since its incorporation in 1976, DeLorme has developed an unprecedented reputation as a leader in the mapping industry. From early beginnings as a paper atlas publisher, the company quickly emerged as a pioneering technological innovator. DeLorme not only embraced new technologies, it developed them.

In the mid-1990s, before GPS usage was widespread, DeLorme was pioneering laptop GPS solutions that today include the popular Earthmate GPS LT-40. Subsequent development led to industry-first GPS solutions for Pocket PC and Palm OS devices and more recently for Bluetooth GPS solutions.

For more information, visit www.delorme.com.